

# Contents

Product Introduction .....	5
Product Overview .....	6
List of Accessories .....	7
Installation of Portable Stand .....	8
Product Connection .....	8
1. Computer Connection .....	8
2. Android Phone or Android Tablet Connection .....	10
3. Wireless Shortcut Remote Connection .....	11
3.1. Wired Connection .....	11
3.2. Bluetooth Receiver Connection .....	12
3.3. Bluetooth Wireless Connection .....	12
Compatibility .....	13
Driver Installation .....	14
1. Driver Download .....	14
2. Driver Installation .....	14
2.1. Windows .....	15
2.2. macOS .....	15
2.3. Linux .....	16


3. Driver Overview .....	16
Stylus Usage .....	19
Touch Feature .....	21
1. Touch Area .....	22
2. Basic Gestures .....	22
3. Advanced Gestures .....	22
4. List of Supported Gestures .....	23
Floating Menu .....	24
Driver Settings .....	25
1. Device Settings .....	26
1.1. Display Calibration .....	26
1.2. Touch .....	27
1.3. Floating Menu .....	32
1.4. Work Area .....	37
1.5. Display Settings .....	42
2. Stylus Settings .....	44
2.1. Stylus Keys .....	45
2.2. Pressure Sensitivity .....	50
2.3. Application .....	52

3. Driver Settings .....	53
4. Wireless Shortcut Remote .....	55
4.1. Application .....	55
4.2. Scroller .....	56
4.3. Shortcut Keys .....	58
4.4. Import/Save .....	59
Driver Uninstallation .....	60
1. Windows .....	60
2. macOS .....	60
3. Linux .....	60
FAQ .....	61
1. How to fix a drawing display that is blank or flickering? .....	61
2. How to fix a device that cannot be recognized by my computer? .....	61
3. How to fix a drawing display not displaying 3840 × 2160 at 60 Hz? .....	62
4. How to prevent my OLED drawing display from burning in? .....	62
5. Will the OLED drawing display exhibit flickering? .....	62
6. How to use the touch feature in Photoshop? .....	63
7. How to prevent accidental touches in drawing software? .....	63
8. How to prevent accidental touches in Krita? .....	63

9.	How to fix a non-responsive stylus? .....	64
10.	How to fix pressure sensitivity issues in drawing software (cursor moves but no pressure response)? .....	64
11.	How to calibrate my stylus to align the cursor? .....	64
12.	How to fix drawing lag in drawing software? .....	65

# **User Manual for Artist Ultra 16 Drawing Display**

## **Product Introduction**

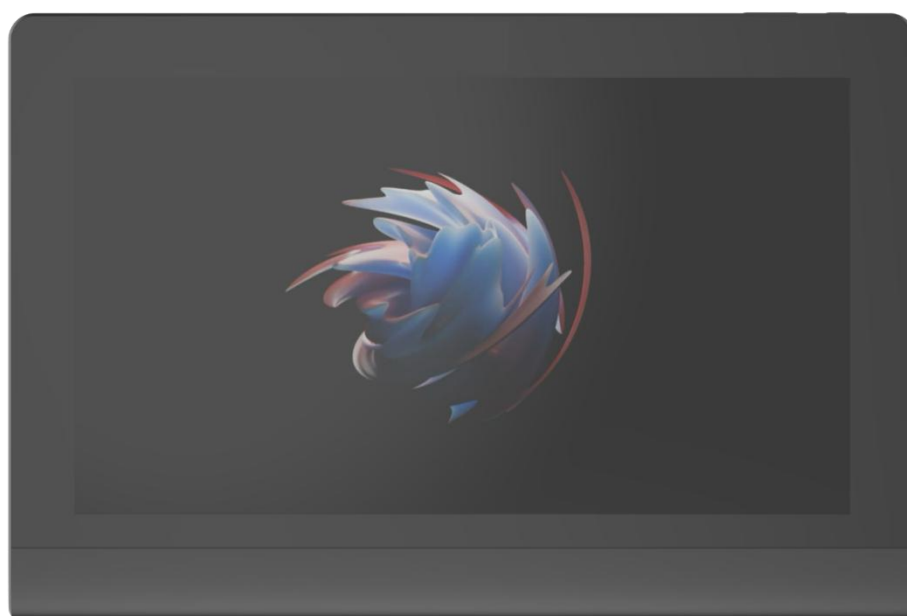


Thank you for choosing the XPPen Artist Ultra 16 Drawing Display. The Artist Ultra 16 adopts a cutting-edge OLED display technology and a multi-finger touch solution to deliver unparalleled visual clarity and intuitive control. To ensure optimal performance and extended service life of your device, please read this Manual thoroughly before use, and adhere to the recommended maintenance and protection guidelines during use.

To support continuous product improvement, physical appearance,

colors, and accessories may vary from descriptions, so please refer to the actual product. The Company reserves the right to make technical updates and revise this Manual without prior notice. Thank you for your understanding.

Note: All images in this Manual are for illustrative purposes only.

## Product Overview

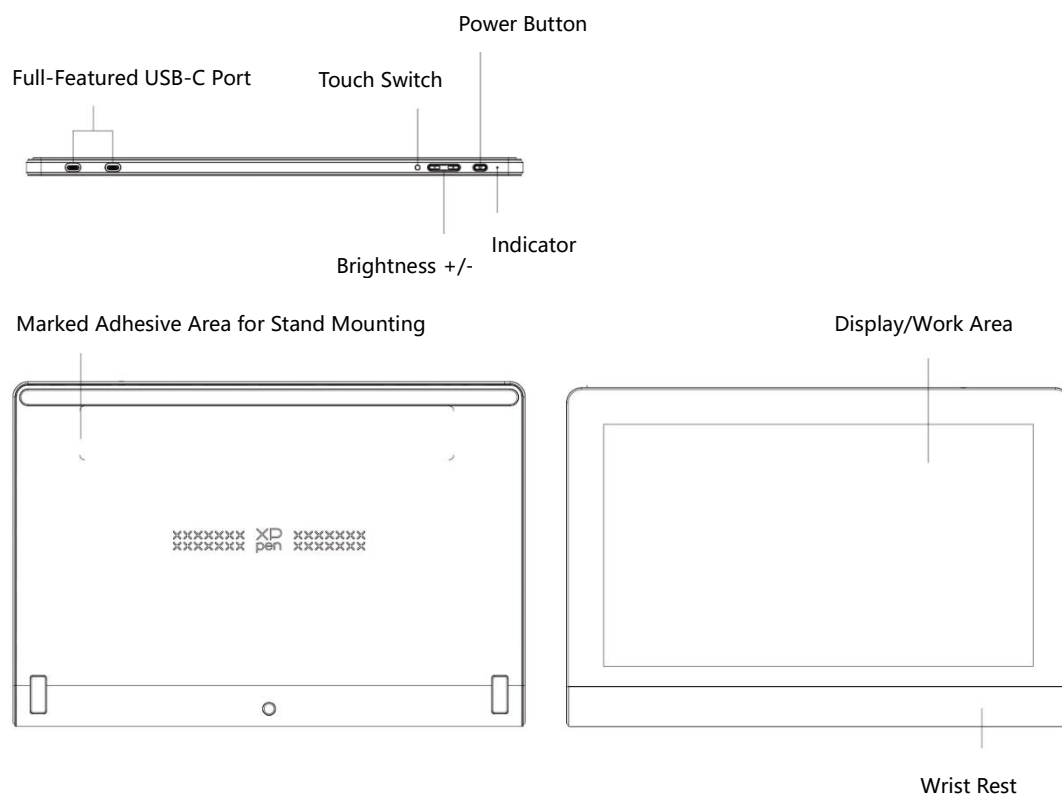

### Indicator Light Status:

- Power On: Press the power button once. Then the indicator light illuminates solid blue; Power Off: Press the power button again
- Standby Mode: The indicator light illuminates solid orange
- Sketch Tablet Mode: Press and hold the power button for 3 seconds. Then the indicator light alternates between blue and orange, which


means the device has successfully entered Sketch Tablet Mode. Press the power button again to restore normal mode

## List of Accessories

Artist Ultra 16 Drawing Display × 1	Stylus Case (with Built-In Replacement Nib & Nib Extractor) × 1
X3 Pro Smart Chip Stylus × 1	X3 Pro Slim Stylus × 1
X3 Pro Smart Chip Stylus Nibs × 10	X3 Pro Slim Stylus Nibs × 10
Replaceable Non-Key Cover for Slim Stylus × 1	Bluetooth Receiver for Wireless Shortcut Remote × 1
USB-C to USB-C Cable × 2	USB-A to USB-C Cable × 1
3-in-1 Cable × 1	PD Power Adapter × 1
Wireless Shortcut Remote × 1	Cleaning Cloth × 1
Gloves × 1	Portable Stand × 1
Quick Guide × 1	Warranty & Driver Download Card × 1

# Installation of Portable Stand

1. Peel off the adhesive film on the back of the stand;
2. Align with the marked adhesive area on the back of the drawing display. Then press gently to fix it;
3. The stand features two adjustable angles, which can be switched easily and can be folded for compact storage after use.

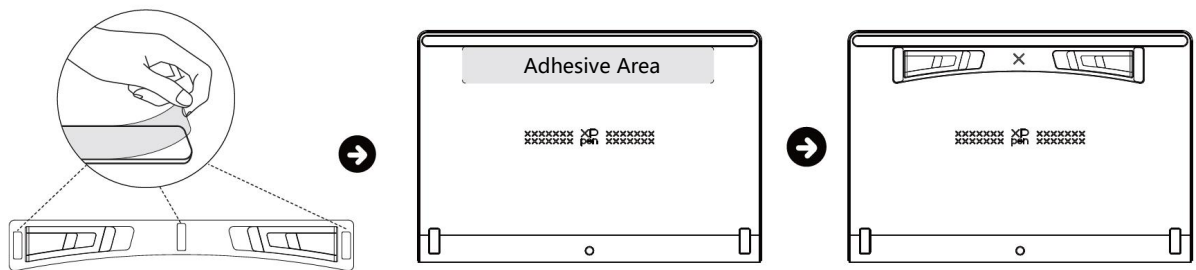

## Product Connection

The product is a non-standalone device that must be connected to a computer, Android phone or Android tablet to work.

### 1. Computer Connection


You can choose one of the following two connection modes depending on the configuration of your computer:

Mode 1: Connect to a computer with a USB-C port that supports DisplayPort output



1. Use a USB-C to USB-C cable to connect your computer to the drawing display;
2. If the display remains unlit, please use a second USB-C cable to connect the drawing display to the power adapter for power supply.


Note: Due to computer power output limitations, when connected via a single USB-C to USB-C cable, the product may not reach maximum brightness and may experience display flickering or blackouts. At this time, please use a second USB-C cable to connect the drawing display to the power adapter for power supply.

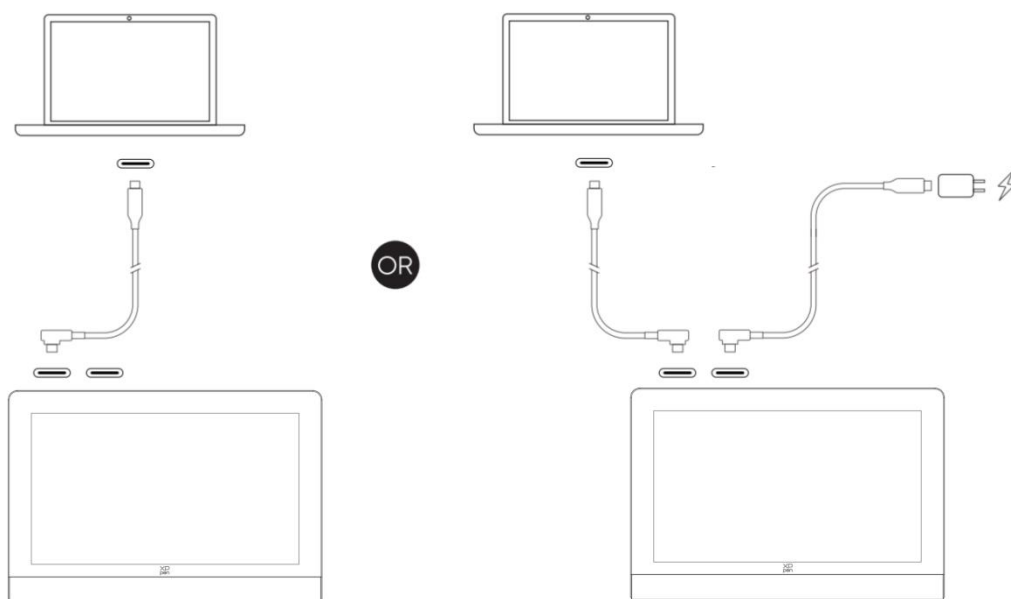

Mode 2: Connect to a computer with USB-A and HDMI ports

1. Plug the HDMI and USB-A connectors of the 3-in-1 cable into your computer;
2. Plug the USB-C connector of the 3-in-1 cable into the drawing display;
3. Connect one end of the second USB-C to USB-C cable to the USB-C power supply port of the 3-in-1 cable. Or connect one end directly to


another USB-C port of the drawing display, and the other end to the PD power adapter for power supply.

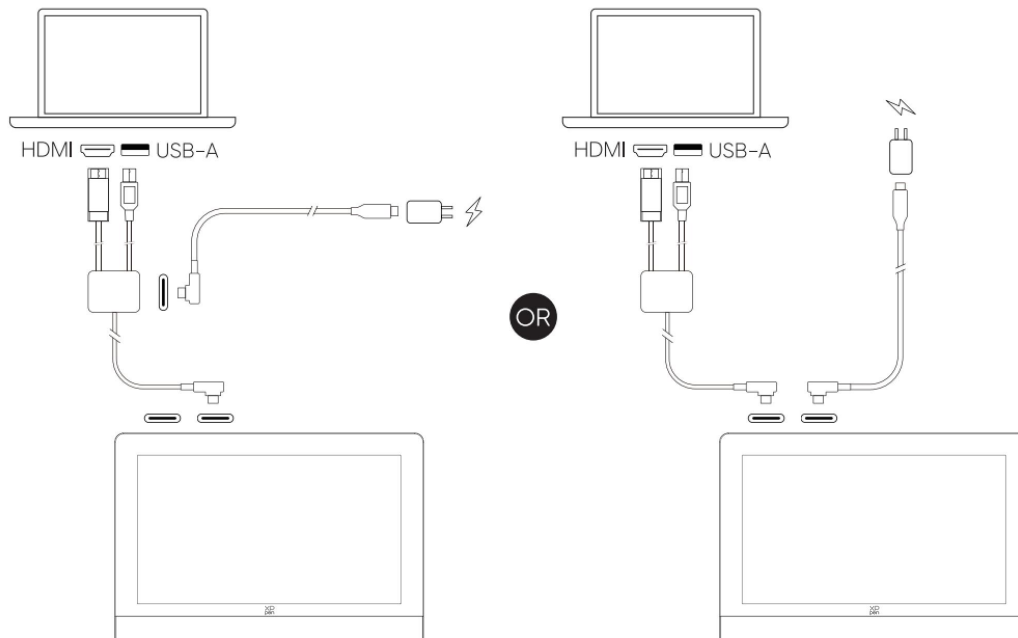

\* It is recommended to prioritize using the dedicated HDMI port on your computer's discrete graphics card (if available).


## 2. Android Phone or Android Tablet Connection

1. Use a USB-C to USB-C cable to connect your phone/tablet to the drawing display;
2. Use another USB-C cable to connect the drawing display and power adapter.

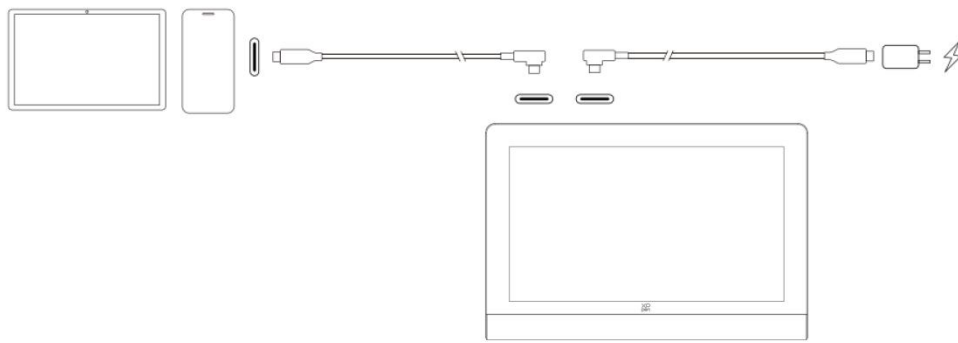


\* It is recommended to use a mobile phone that supports Desktop Mode for connection. For compatible mobile phone models, please refer to the official website.

### 3. Wireless Shortcut Remote Connection

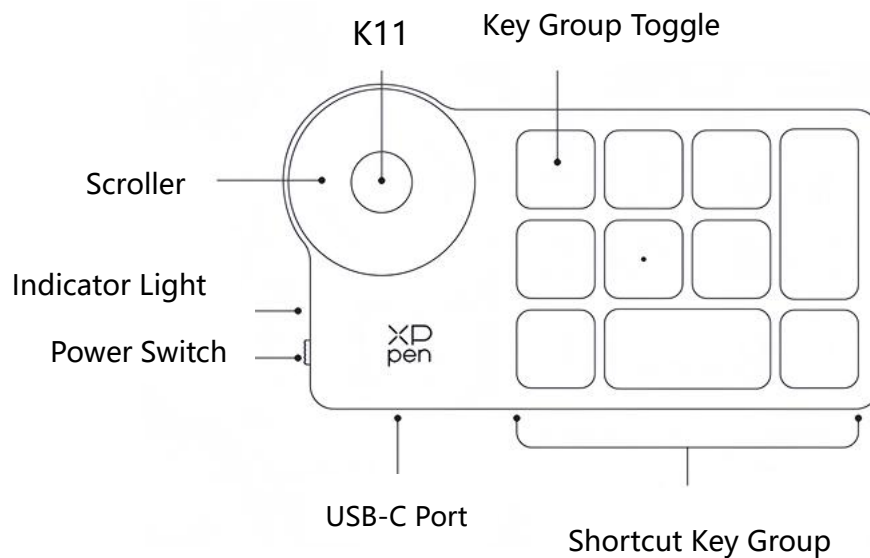


#### 3.1. Wired Connection

Connect a USB-C to USB-A or USB-C to USB-C cable to your computer and device.

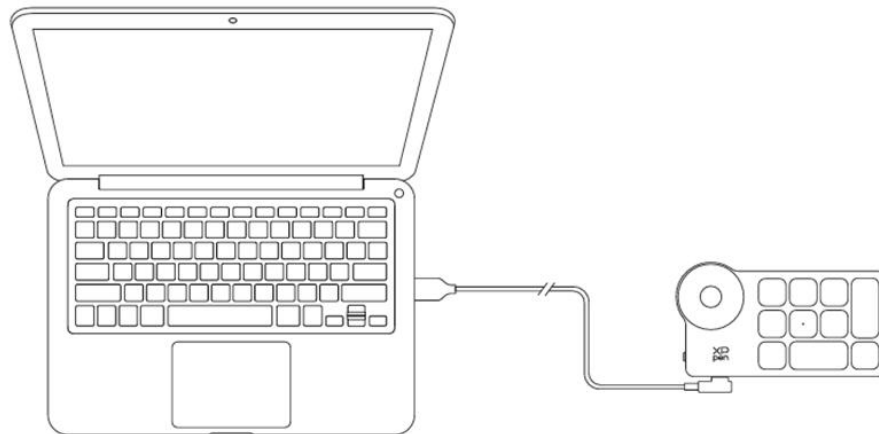

### 3.2. Bluetooth Receiver Connection

Insert the Bluetooth receiver into your computer. Toggle the power switch of the wireless shortcut remote. Then the indicator light illuminates solid blue for 30 seconds before turning off.

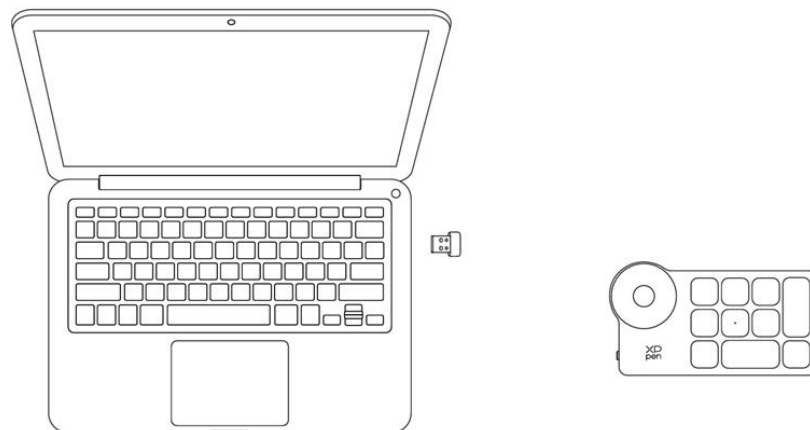


### 3.3. Bluetooth Wireless Connection

1. Toggle the power switch of the wireless shortcut remote. The indicator light of the wireless shortcut remote blinks blue slowly. Then press and hold the **K11** key for 6 seconds to enter pairing mode, during

which the indicator light blinks blue rapidly

2. Enable Bluetooth on your computer. Add a new Bluetooth device. Search for the device named **Shortcut Remote**. Click it to complete Bluetooth pairing. Then the indicator light illuminates solid blue for 30 seconds before turning off

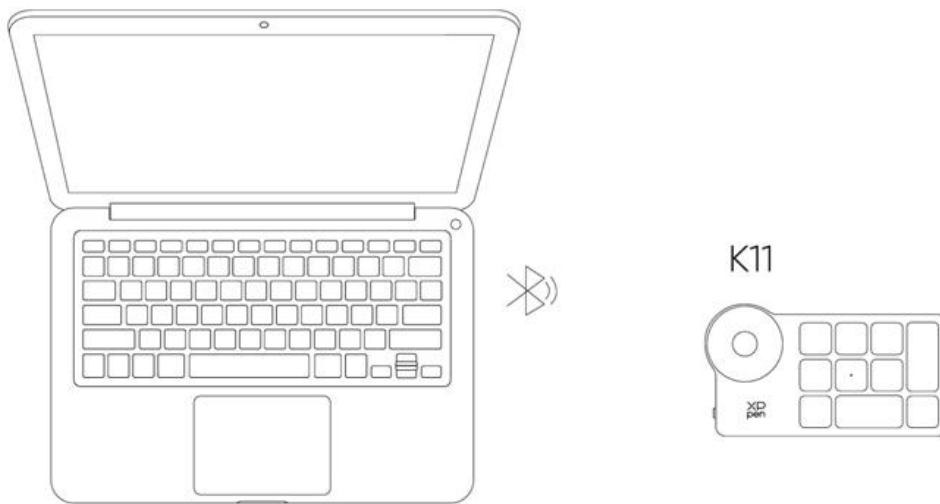

## Compatibility

Windows 7 or later (Touch function supports only on Windows 10 or later)

macOS 12 or later

Android 10.0 or later (USB3.1 DP1.2 required)

ChromeOS 88 or later

Windows ARM

Linux (Touch function supports only on Ubuntu 20.04 LTS or later)

# Driver Installation

## 1. Driver Download

1. Make sure your drawing display is properly connected to the computer;
2. Visit the official website: [www.xp-pen.com](http://www.xp-pen.com);
3. Navigate to the **Driver** page. Search for **Artist Ultra 16**. Then download and install the driver compatible with your system;
4. Launch the driver. Configure parameters and test product features.

Important Pre-Installation Notes:

- Close all anti-virus software and drawing software
- Uninstall drivers for other brands of sketch tablets/displays
- Restart your computer after installation

\* It is recommended to use the latest version of the driver for optimal performance.

## 2. Driver Installation

Notes:

- Before installation, please close all active anti-virus software and drawing software;
- If your computer has drivers for other brands of sketch tablets/displays installed, please uninstall them first;


- After installation, please restart your computer;
- For optimal device performance, it is recommended to use the latest version of the driver.

## 2.1. Windows


Unzip and run the **.exe** file with administrator privileges. Follow the prompts to complete the installation.

## 2.2. macOS

Unzip and run the **.pkg** file. Follow the prompts to complete the installation. Add the required security settings (**System Preferences** -> **Privacy & Security** -> **Accessibility**). After authorization and unlocking, make sure the **XPPenDriver, XPPenTablet and XTouchDriver** option are checked. Otherwise, the device and driver may fail to function properly.

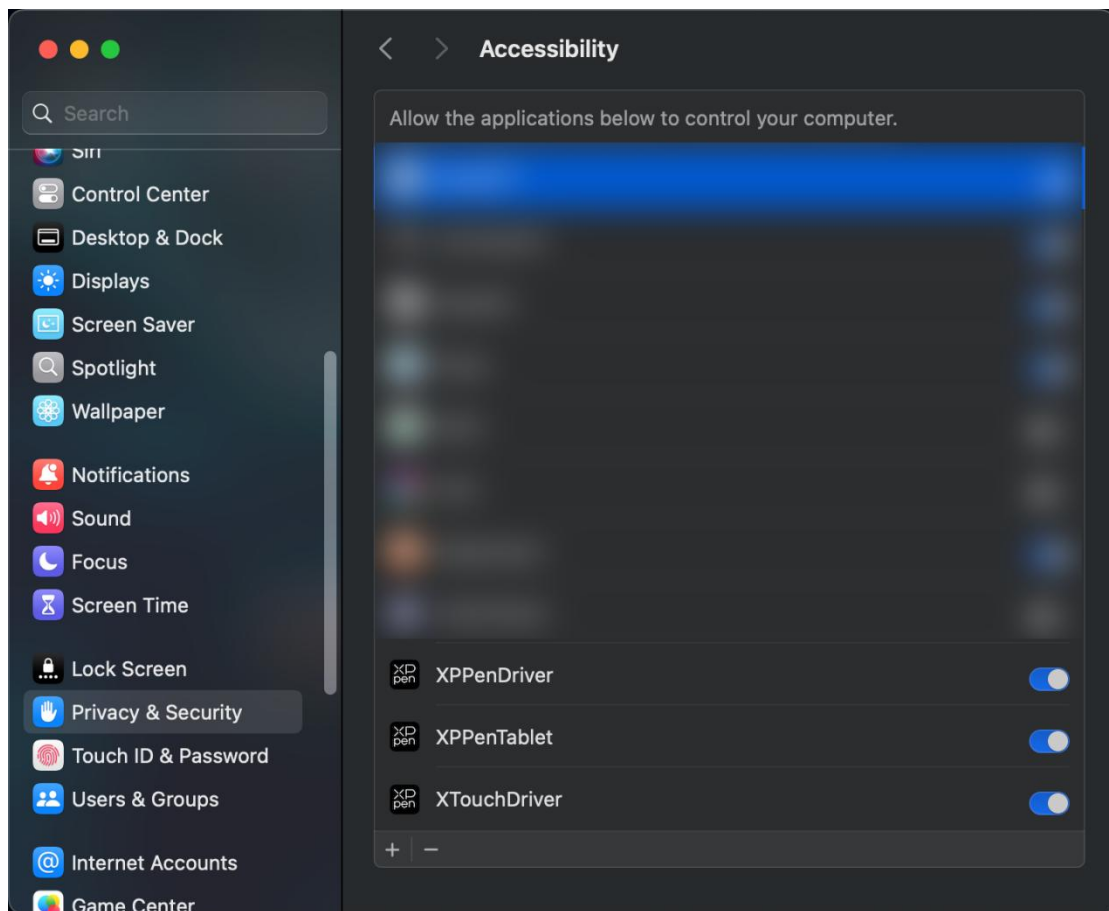

If there are no related options in the list, please navigate to the **Library**  
-> **Application Support** -> **PenDriver** to add manually.

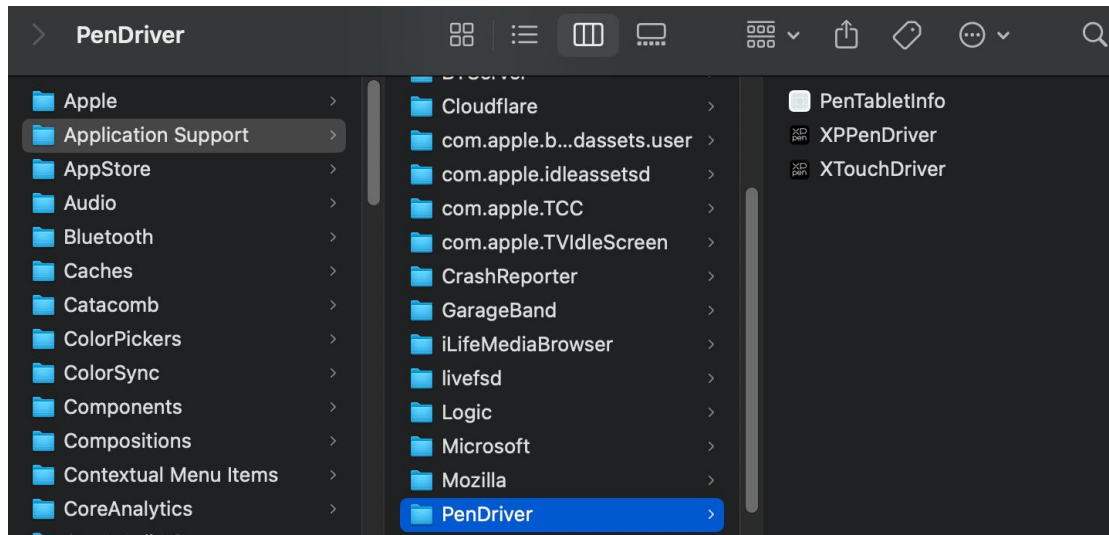

## 2.3. Linux

DEB: In the command line, enter **sudo dpkg -i**. Drag the installation file into the window. Then execute the command;

RPM: In the command line, enter **sudo rpm -i**. Drag the installation file into the window. Then execute the command;

Tar.gz: Unzip the file first. In the command line, enter **sudo**. Drag **install.sh** into it. Then execute the command.

## 3. Driver Overview


After driver installation completes, the software launches automatically. If automatic launch fails, please manually navigate to the driver installation directory and open the driver.

Windows access path: **Start -> Pentablet**




MacOS access path: **Applications -> XPPen -> PenTablet**


For no device detected or connection unsuccessful, the following prompt is displayed. Please try to reconnect the device and restart the computer or driver before trying again, or contact customer support for assistance.

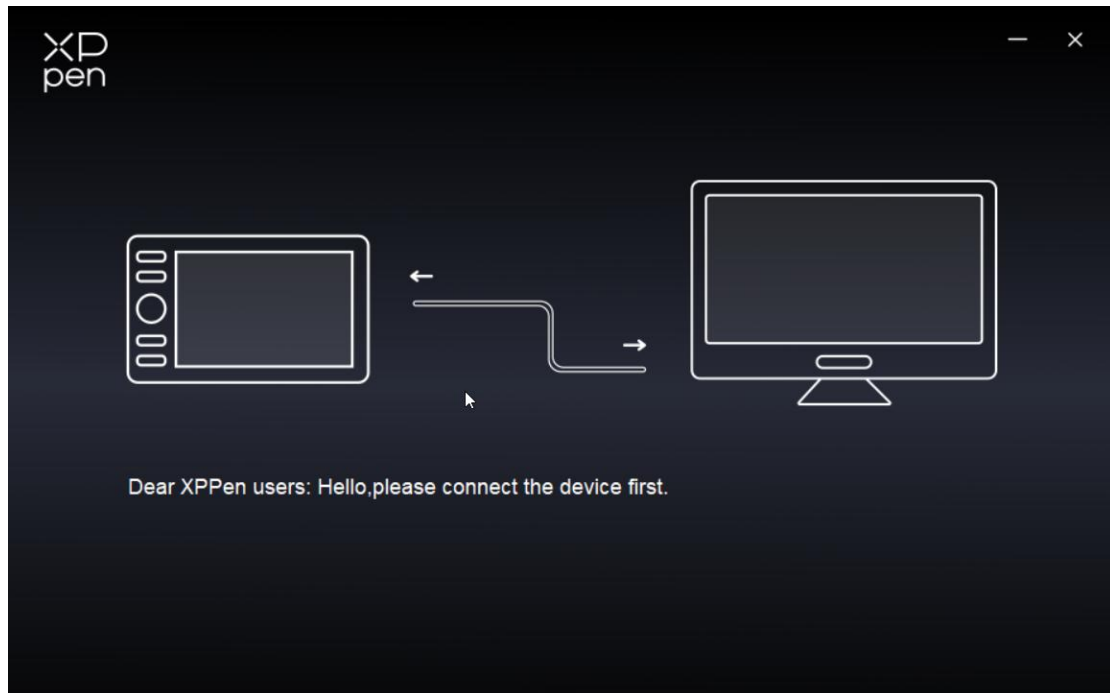

If the device is successfully connected to your computer, the device name is displayed in the upper left corner of the driver.

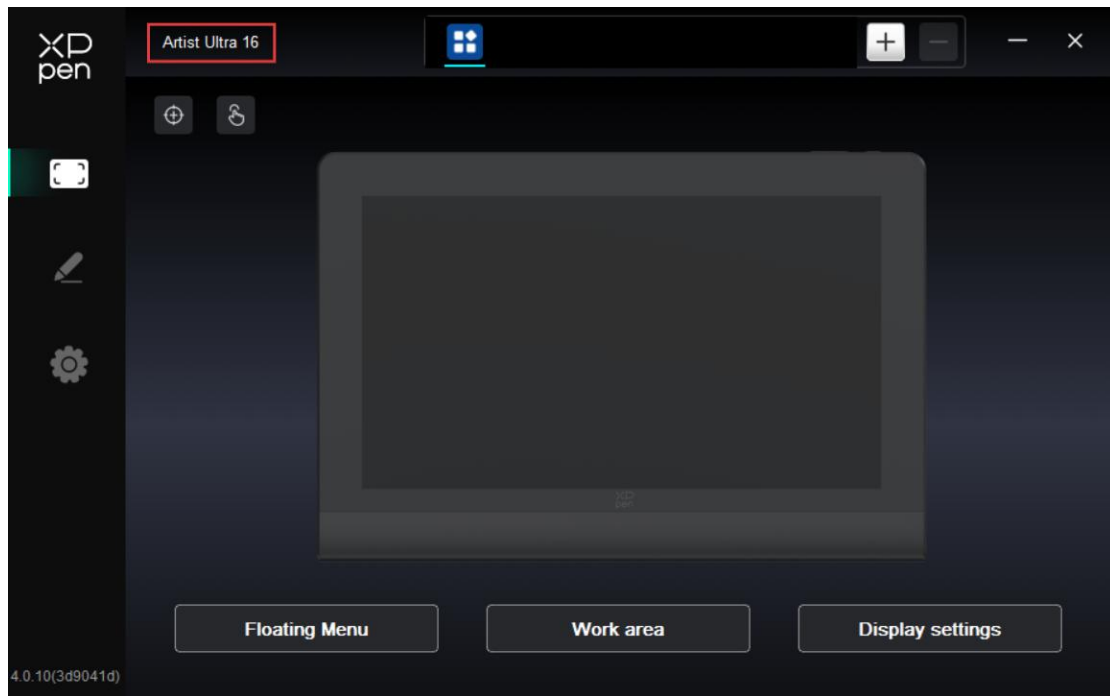

The driver can support up to three devices at the same time. After switching one of them, you can customize settings for the currently selected device, and these settings only apply to the device.

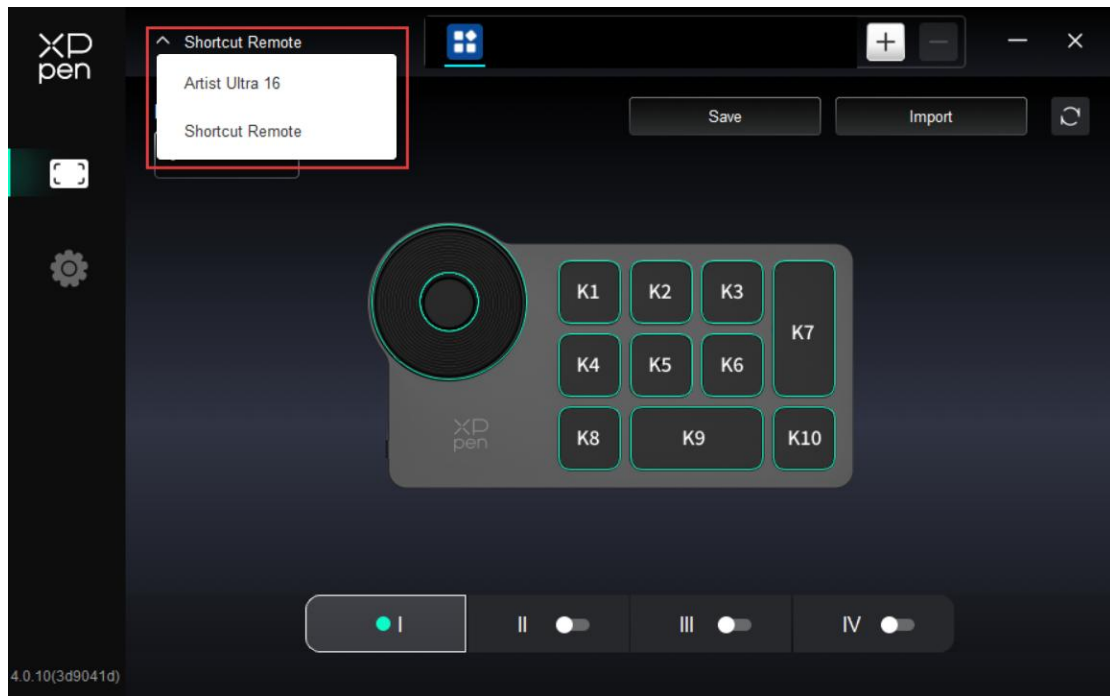

## Stylus Usage

The Artist Ultra 16 comes standard with the X3 Pro Smart Chip Stylus and X3 Pro Slim Stylus. The X3 Pro Smart Chip Stylus comes with a silicone grip sleeve to reduce fatigue from long periods of creation. The X3 Pro Slim Stylus offers enhanced ergonomics for a comfortable grip, while its removable keys help minimize accidental presses.

### **Stylus Holding:**

Hold the stylus as you use a regular pen or pencil. Then rotate the stylus to adjust the shortcut key position until your thumb or finger can comfortably press the key.

Note: During use, avoid accidental presses of the shortcut key to prevent unintended operations.

### **Stylus Storage:**

When not in use, please store your stylus properly. To prevent pressure or weight from being applied to either the nib or eraser ends to extend the service life of the nib and pressure sensor, it is recommended to store the stylus in its included case when not in use.

Note: Do not place the stylus on the device when not in use. Otherwise, it may affect mouse operation and may prevent the computer from entering Sleep Mode.

### **Nib Replacement:**

Replace the nib promptly if it becomes severely worn or develops sharp edges.

1. Find the replacement nibs in the stylus case or product packaging.

Please note that the nibs for the X3 Pro Smart Chip Stylus and X3 Pro Slim Stylus are not interchangeable, so ensure correct identification when replacing;


2. Insert the current nib into the nib extractor inside the stylus case.

Then tilt the stylus to remove the old nib;

3. Insert the new nib into the stylus's socket. Push it vertically until it stops.

## Touch Feature

The Artist Ultra 16 supports the multi-finger touch feature, which improves creative efficiency through gesture operation. You can use the top touch keys to enable or disable this feature.

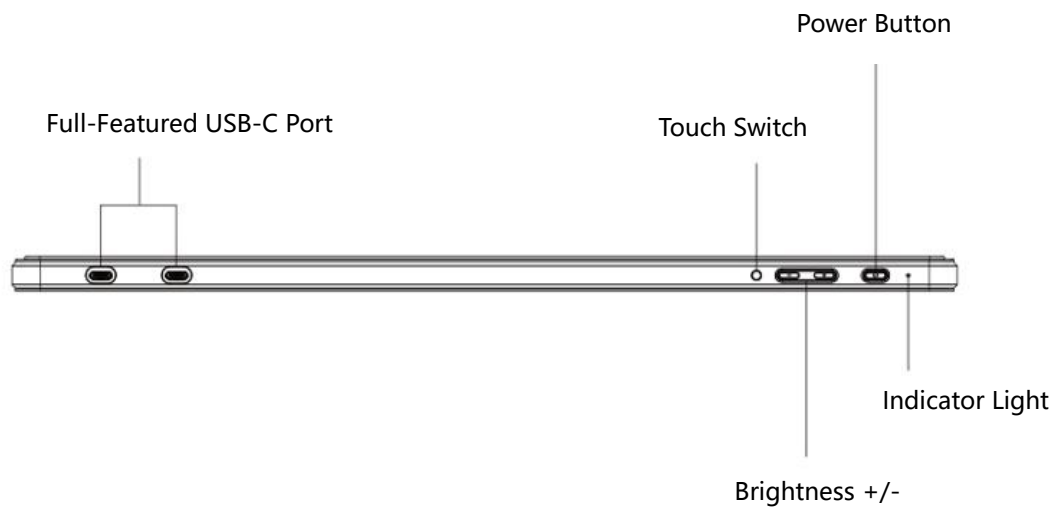

With the touch feature enabled, you can use multi-finger touch gestures on Windows or macOS. The product supports system standard gestures. You can also customize the touch area and custom gestures through the product driver.

# 1. Touch Area

The product supports three touch area modes, including Default, Basic, and Custom.

- Default: The entire display area is touch-enabled;
- Basic: Touch input is enabled only for the floating menu on the display; no single- or multi-finger input is recognized elsewhere;
- Custom: Touch input is enabled only outside the custom area; no single- or multi-finger input is recognized in the custom area (such as the canvas area).

## 2. Basic Gestures

The basic gestures include single- and two-finger touch interactions. Basic gestures enable system navigation, mouse clicks, scrolling, zooming, or rotation.

## 3. Advanced Gestures

Advanced touch gestures include 3-, 4-, and 5-finger touch interactions. The product supports standard multi-finger gestures. You can also select new custom gestures through the gesture drop-down menu.

## 4. List of Supported Gestures

Note: Some system default gestures may not be supported depending on your operating system version.

Gesture	Operation	Windows 11	macOS
Single-finger	Tap	Select	Select
	Double tap	Open	Open
	Long press	Right click	Not supported
	Drag	Drag	Drag
Two-finger	Tap	Not supported	Right click
	Double tap	Not supported	Smart zoom
	Scroll	Scroll up and down/left and right	Scroll up and down/left and right
	Pinch	Zoom	Zoom
	Rotate	Rotate	Rotate
3-finger	Tap	Floating menu Customizable	Floating menu Customizable
	Sweep left	Switch	Not supported

	and right	application	
	Swipe up	Show all open windows	Mission Control Customizable
	Swipe down	Show Desktop	APP Expose Customizable
4-finger	Sweep left and right	Switch application	Switch application
	Swipe down	Toggle display mapping Customizable	Not supported
	Pinch	Not supported	Lanuch Pad
	Spread	Not supported	Show Desktop
5-finger	Tap	Show Desktop Customizable	Toggle display mapping Customizable
	Swipe down	Show Driver Settings Customizable	Show Driver Settings Customizable

## Floating Menu



The floating menu can display floating shortcut keys on the drawing display or computer monitor. You can set common operations on the floating menu. Then tap the button with your stylus, mouse or gesture to perform the set operation. To customize the display and features of the floating menu, click the [Floating Menu](#) button on the driver's homepage.




Icons in the upper left corner: Lock position, access driver settings for the floating menu, or close the floating menu.

## Driver Settings

By clicking the icon on the left side of the driver, you can switch the driver features to set the relevant settings of the drawing display, including:

1. Device Settings
2. Stylus Settings


### 3. Driver Settings

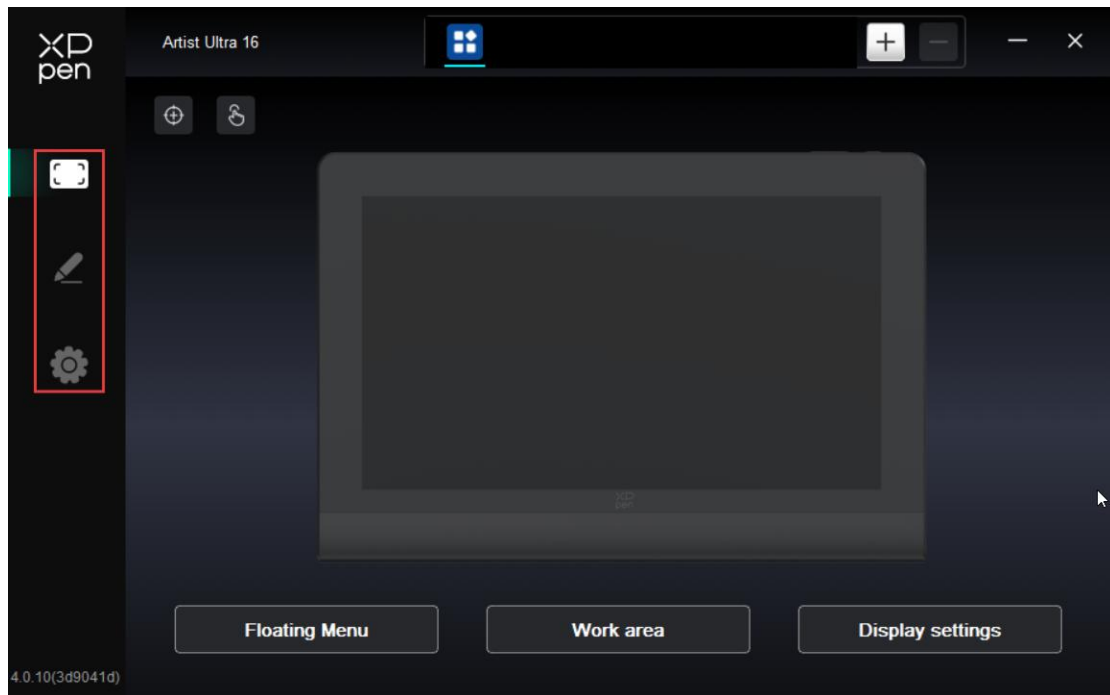

## 1. Device Settings


### 1.1. Display Calibration

Make sure the stylus is properly mapped to your Artist Ultra 16. Otherwise, please refer to the *Work Area* section to adjust the mapping area. Then use the stylus nib to tap the red cross center that appears on the display in standard stylus holding style to calibrate the offset between the stylus and cursor.

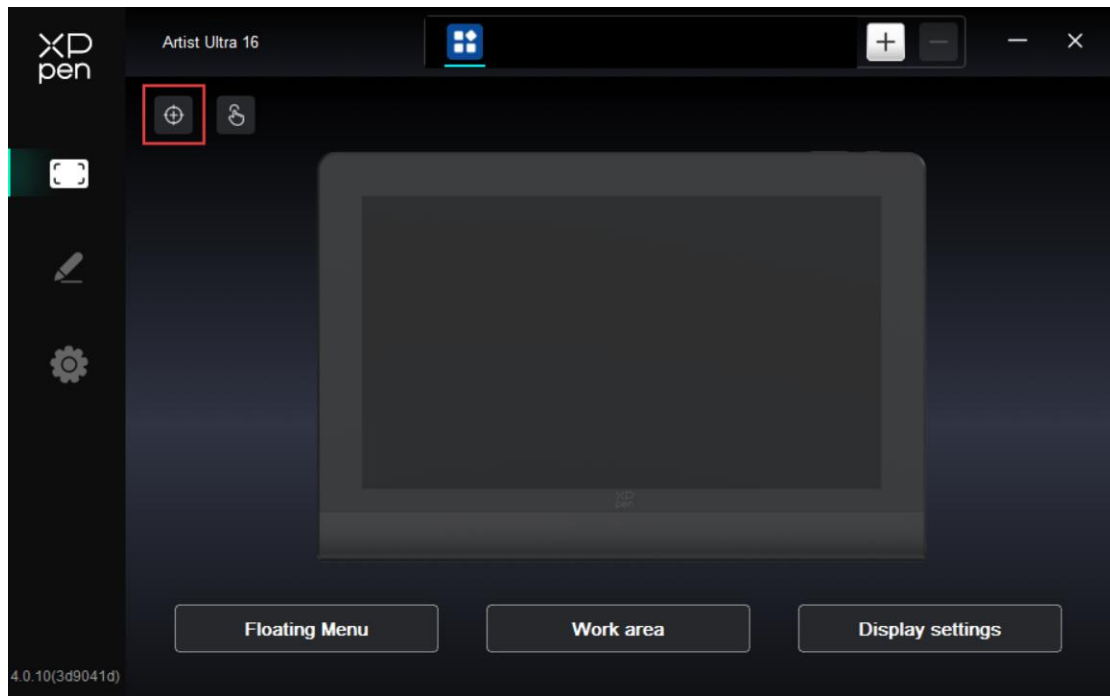

## 1.2. Touch

You can customize your touch area and gestures through the touch feature

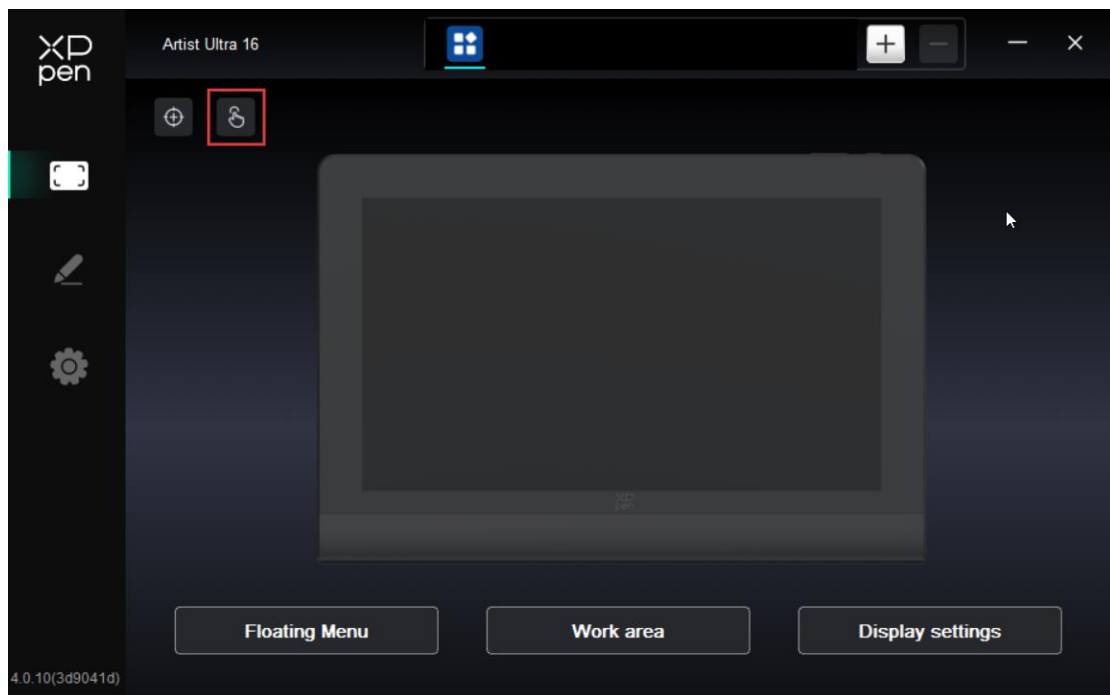


### 1.2.1. Touch Area

The touch area can only be set when the touch feature is enabled. If the touch feature is disabled, press the touch key on the top of the product to enable the touch feature.



The product supports three touch area modes, including Default, Basic, and Custom. You can switch between them and choose the mode that suits you best.

- Default: The entire display area is touch-enabled;
- Basic: Touch input is enabled only for the floating menu on the display; no single- or multi-finger input is recognized elsewhere;
- Custom: Touch input is enabled only outside the custom area; no single- or multi-finger input is recognized in the custom area (such as the canvas area).

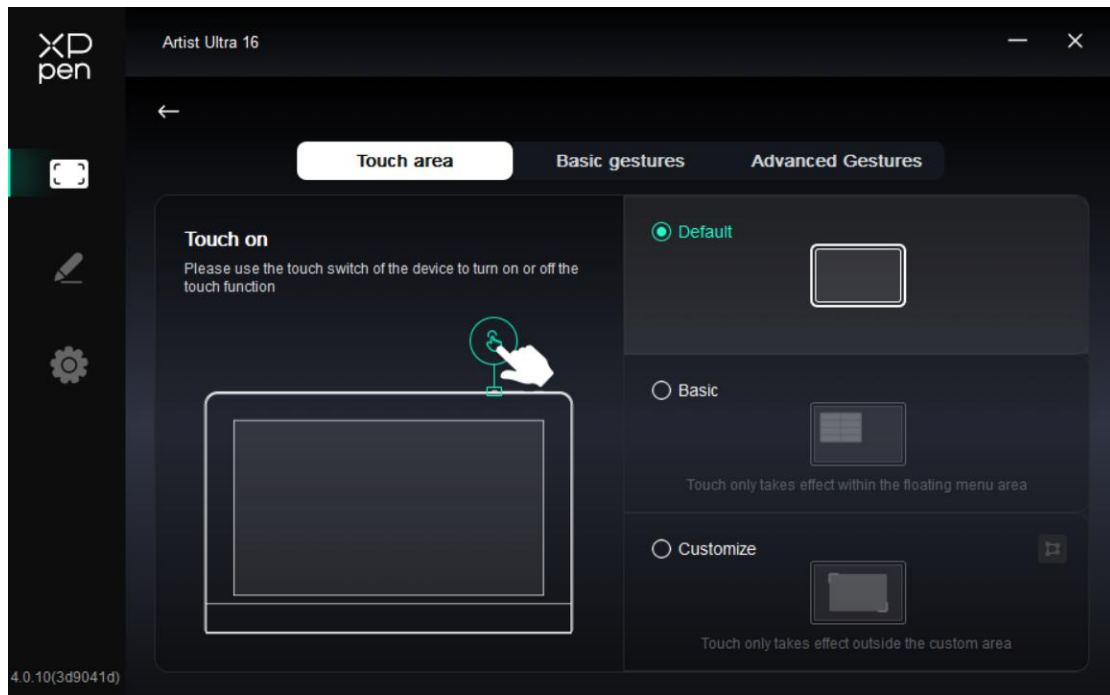


## Set Custom Touch Area

Select **Custom**. Then, on the right side, click the **Custom** option. On the pop-up window, click the upper left corner and the lower right corner of the area to be set to complete the setup.

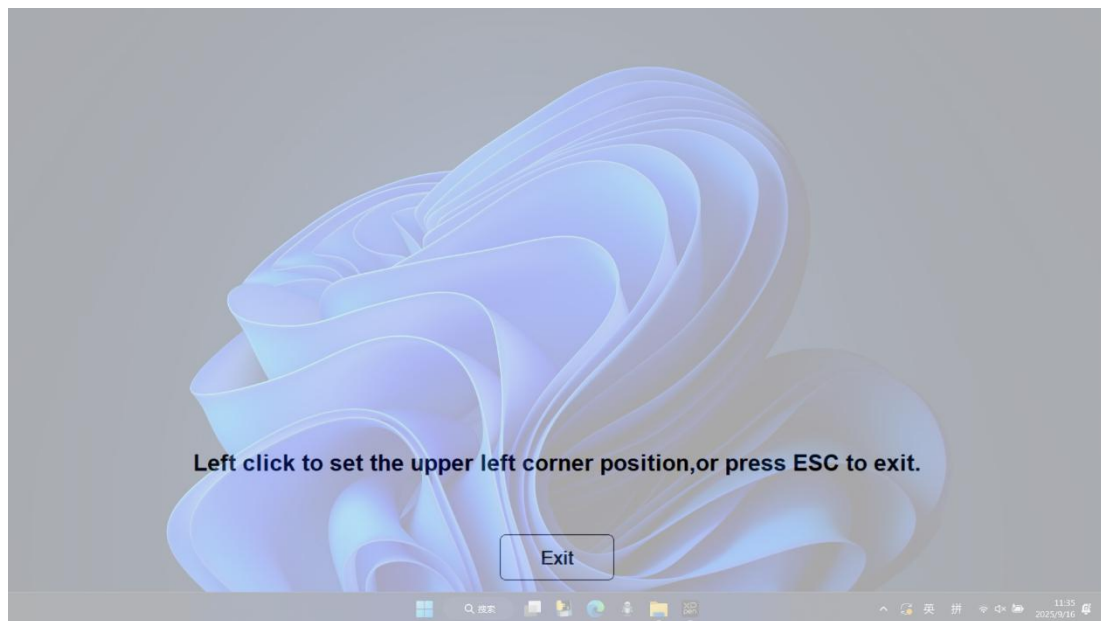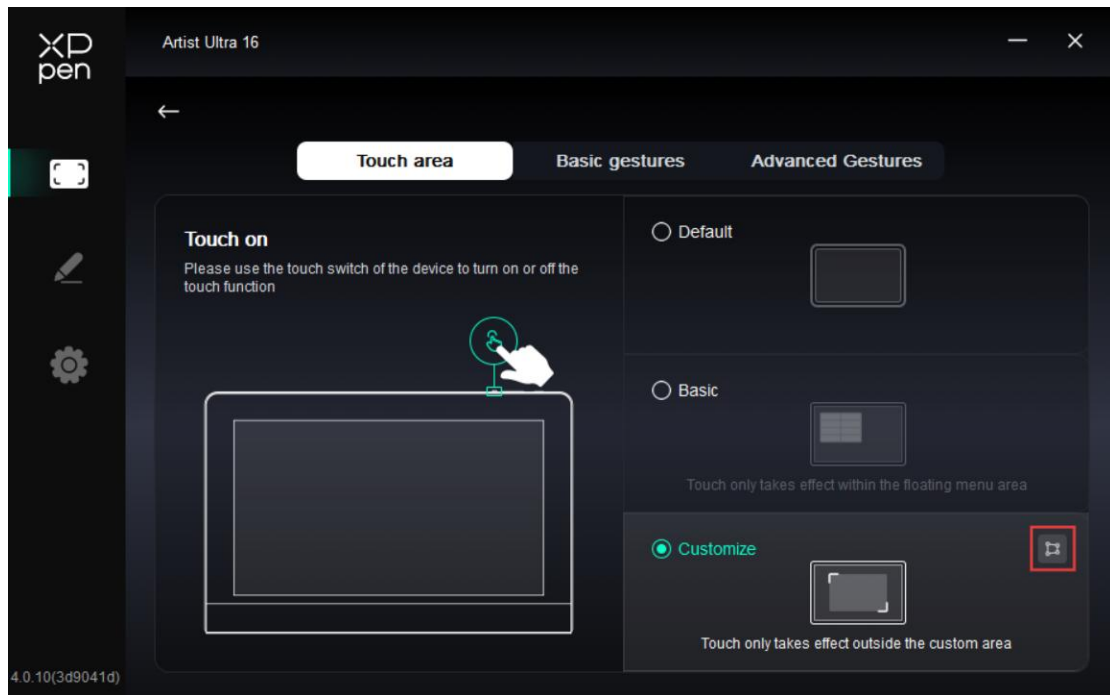


### 1.2.2. Basic Gestures

The basic gestures include single- and two-finger touch interactions. Basic gestures enable system navigation, mouse clicks, scrolling, zooming, or rotation.

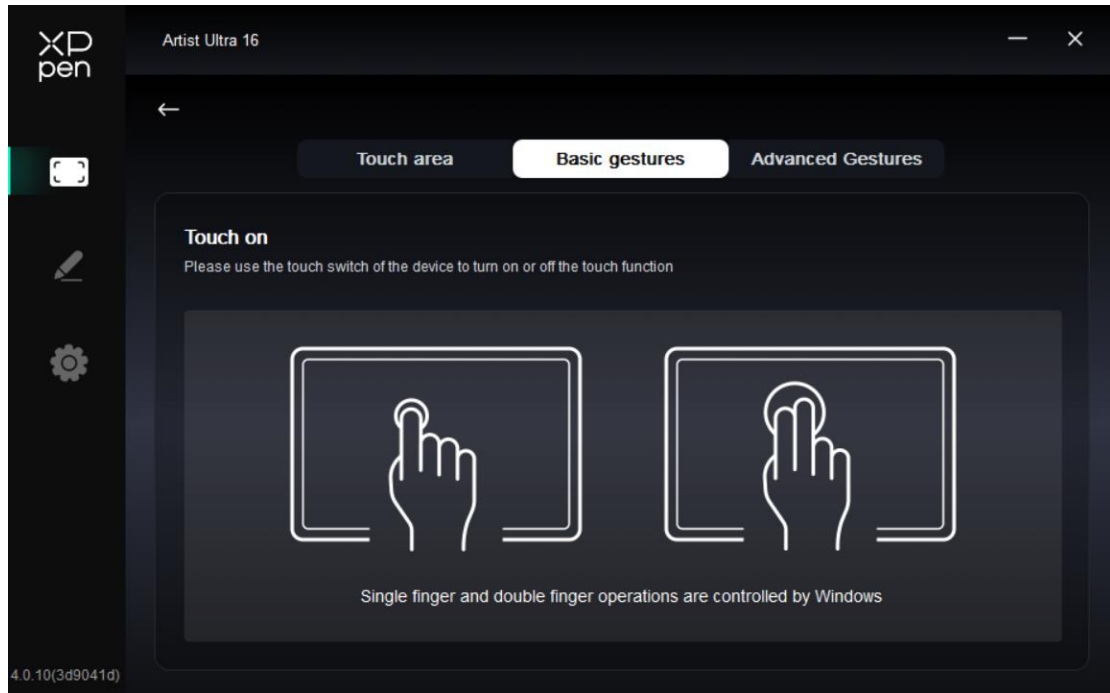

### 1.2.3. Advanced Gestures


Advanced touch gestures include 3-, 4-, and 5-finger touch interactions. The product supports standard multi-finger gestures. You can also select new custom gestures through the gesture drop-down menu. For specific supported gestures, please refer to the [List of Supported Gestures](#).

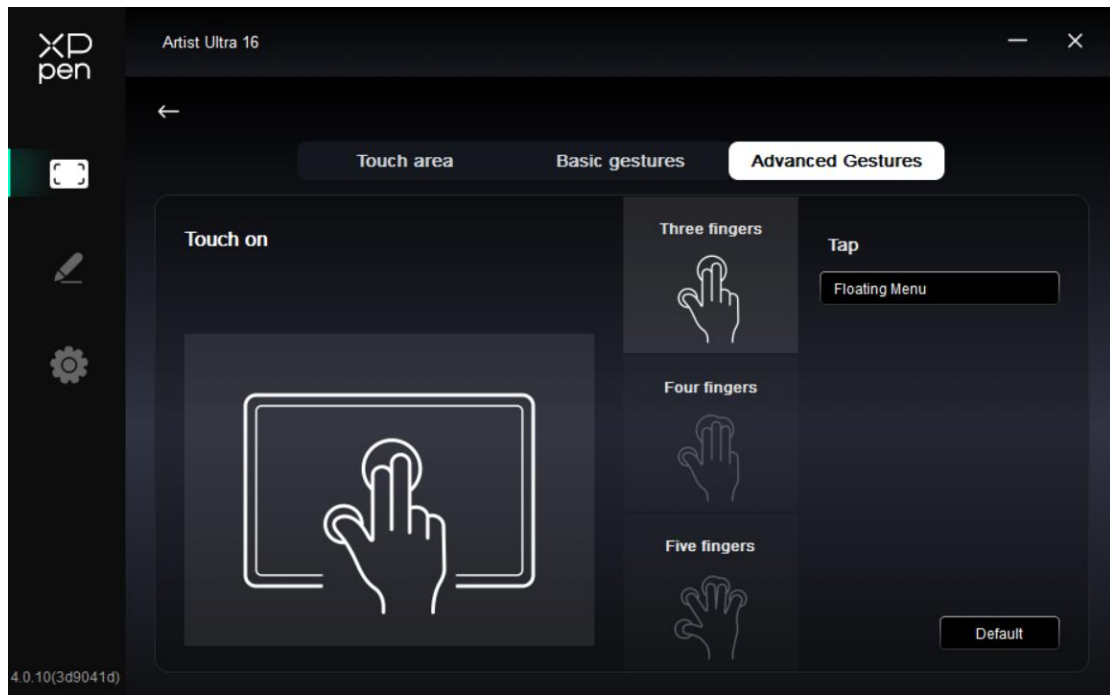


### 1.3. Floating Menu

The floating menu can display floating shortcut keys on the drawing display or computer monitor. You can set common operations on the floating menu. Then tap the button with your stylus, mouse or gesture to perform the set operation.




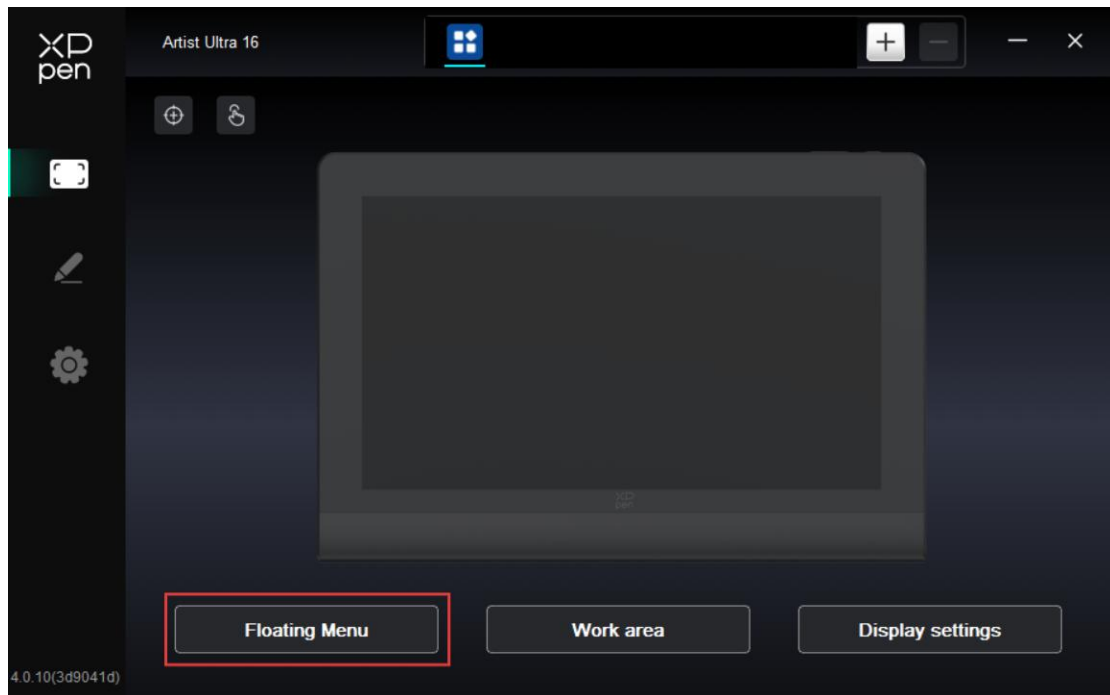

The floating menu supports horizontal and vertical layouts. Click the upper left corner area to switch between layouts. On the upper right corner, click the **Show** button. Then the floating menu is displayed on the desktop.

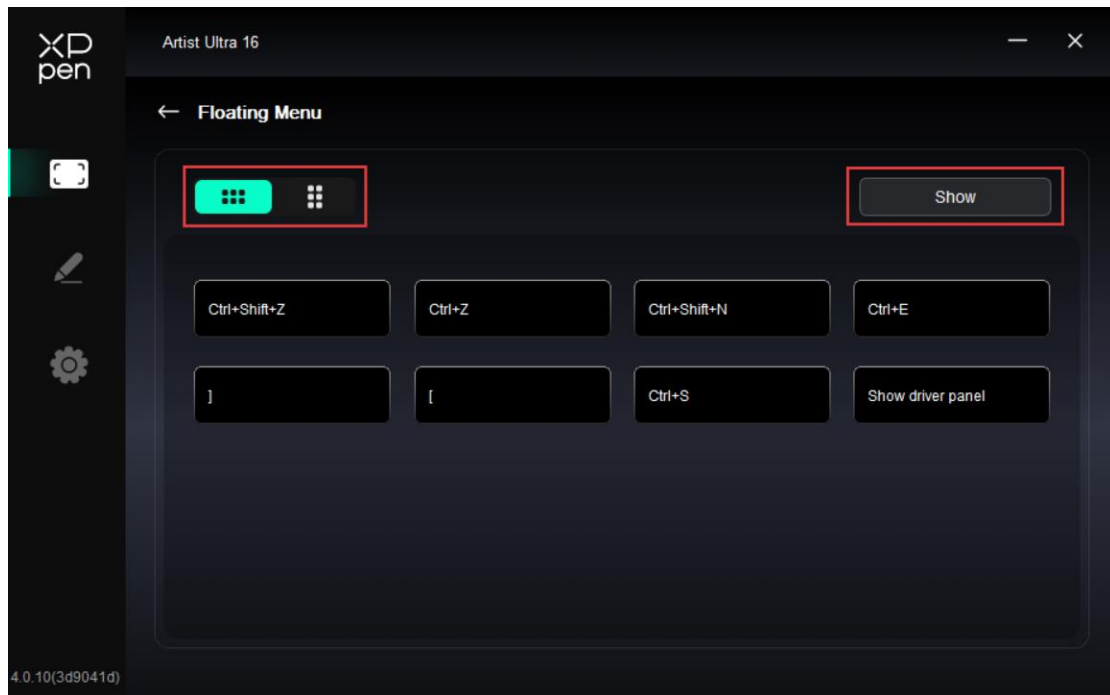

On the floating menu, click any shortcut key to configure its function.  
You can set it as a **Shortcut Key**, **Others**, or **Execute Application**.

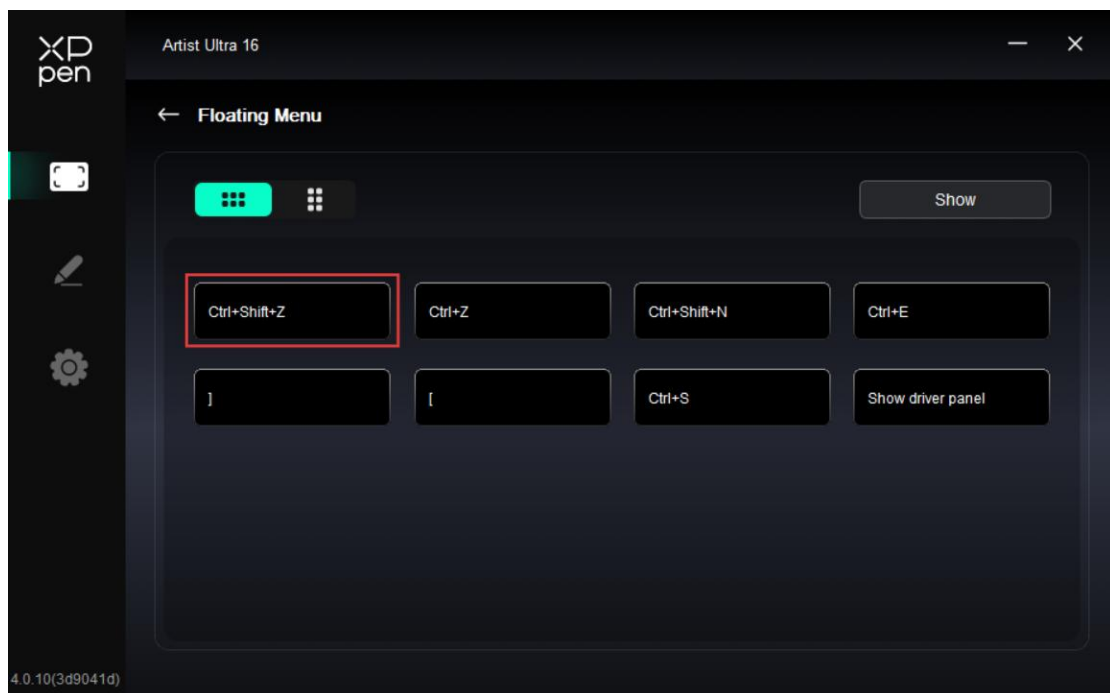


## Shortcut Key:

Configure shortcut keys. For example, in 3D MAX software, set to **Alt + A** to activate the **Align** tool.

Shortcut keys can be configured in multiple groups. For example, type **Ctrl + C** and **Ctrl + V**. When you press the corresponding shortcut keys, all assigned functions within the group execute sequentially.

Windows (Command): Add system key combinations. For example, to type **Win (Cmd) + Shift + 3**, press **Shift + 3**. Then the driver automatically includes the system key.

Custom Name: At the bottom of the driver interface, use the **Custom Name** to assign a display name for your current configuration.

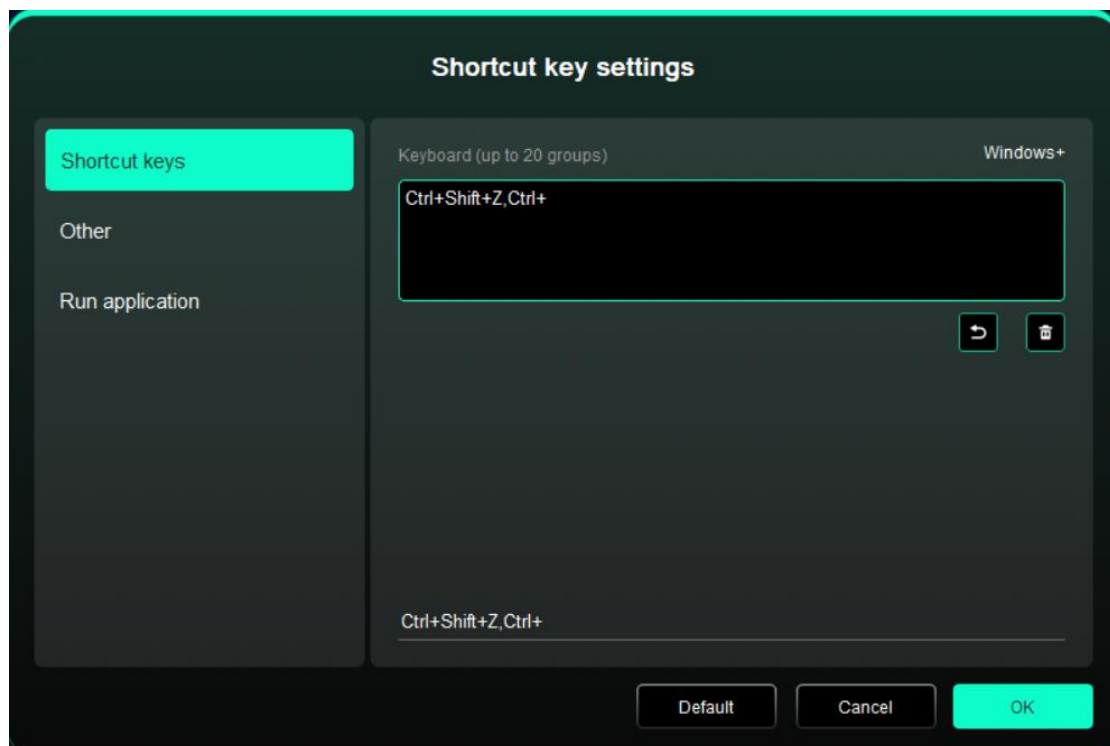

## Others:

Show Driver Panel: Used to quickly access the driver settings panel

Switch Monitors: Used to map the cursor to alternate monitors when multiple monitors are connected

Precision Mode: Used to limit the active display area to a certain range, enabling detailed drawing within the limited area

[B]/[E]: Used to switch repeatedly between **B** and **E** keys

Pen/Eraser: Used to switch repeatedly between **Pen** and **Eraser** modes


Switch to Touch Mode 1: Used to switch repeatedly between **Default** and **Basic** touch modes

Switch to Touch Mode 2: Used to switch repeatedly between **Default** and **Custom** touch modes

Show Desktop: Used to display the system desktop


On-Display Keyboard: Used to activate the system keyboard

No Action: Performs no function

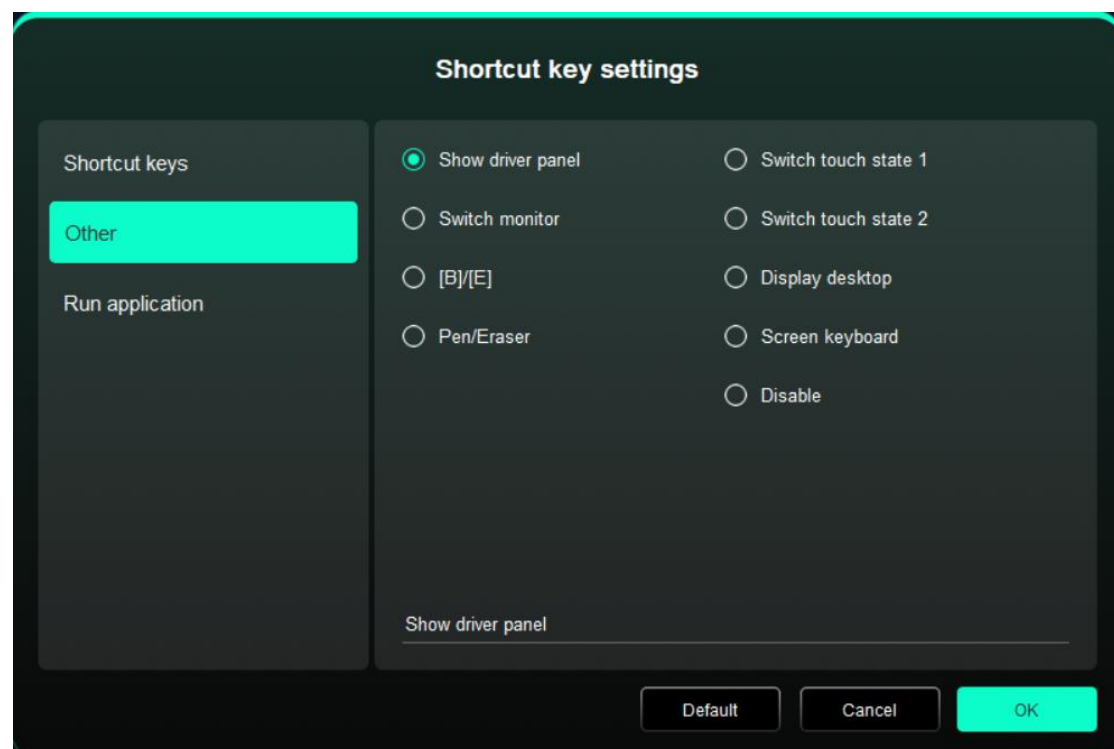


## Execute Application:

Use shortcut keys to quickly launch the corresponding applications

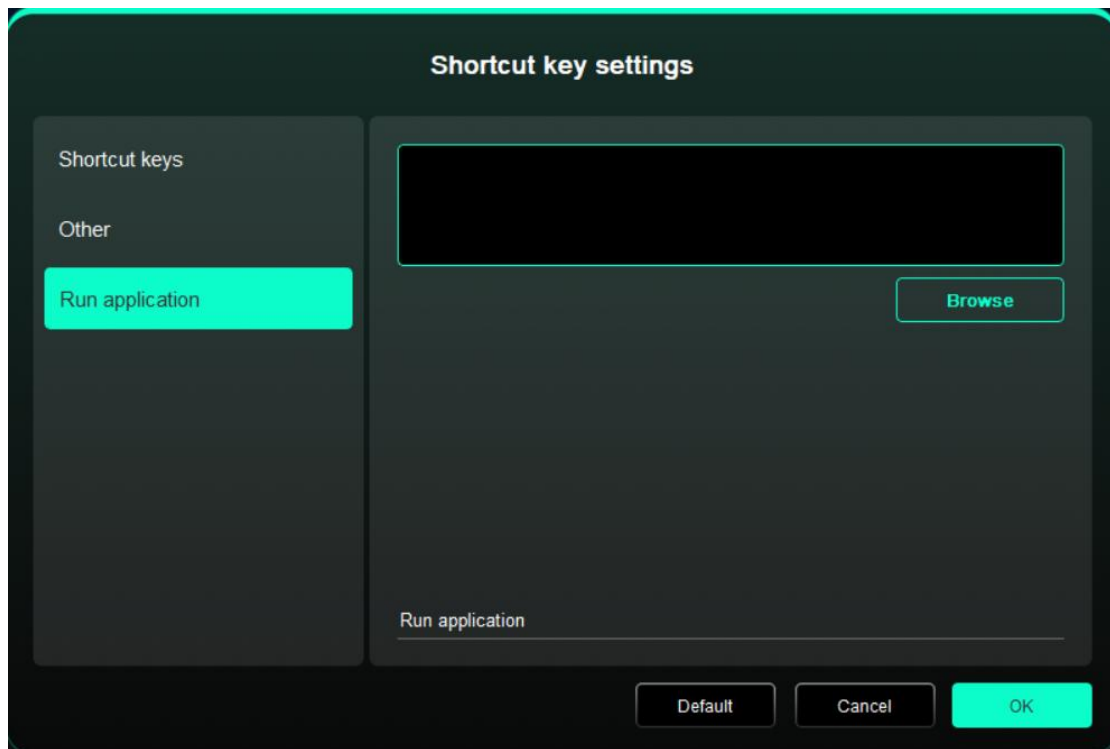

## 1.4. Work Area

Used to define the mapping relationship between the drawing display's work area and the screen's display area.

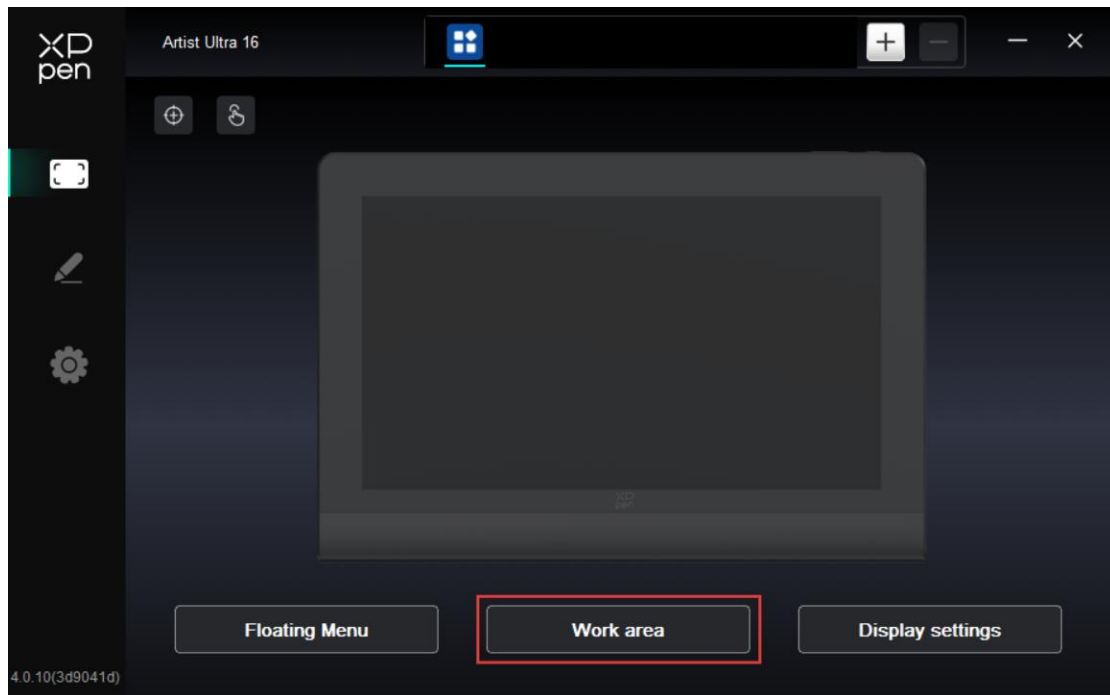

## Screen

Used to define the mapping relationship between the current monitor's display area and the device.



If you are using multiple monitors in Duplicate Mode, the drawing display's work area is mapped to all monitors. The cursor moves simultaneously on every monitor as the stylus moves within the work area.


If you are using multiple monitors in Extended Mode, in the **Screen** tab, select which monitor the drawing display's work area is mapped to.

Set the monitor's mapping area:

1. Full-Screen Area: The entire area of the monitor is selected;
2. Custom Screen Area: Supports three configuration modes.
  - Drag Mode: On the screen preview, drag the cursor from one point to another;
  - Coordinate Mode: In the corresponding input fields next to **X**, **Y**,

**W**, and **H**, enter coordinates;

- Click Mode: Click the **Click to Select Screen Area** button. Then, on the monitor screen, click the upper-left and lower-right corner positions to be selected;

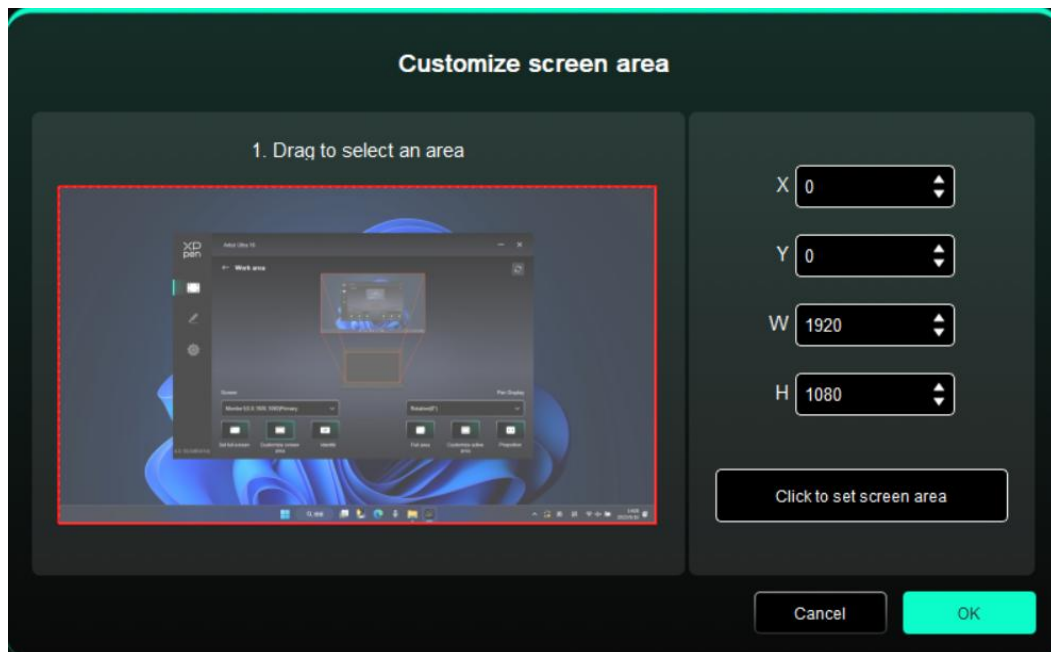

### 3. Screen Identification

Used to identify all connected monitors, with numeric identifiers shown in the lower left corner of each monitor screen.

## Drawing Display


Used to set the work area of your current drawing display.





Set the drawing display's work area:


1. Full-Tablet Area: The entire work area of the drawing display;
2. Custom Tablet Area: Supports three configuration modes.
  - Drag Mode: On the drawing display preview, drag the cursor from one point to another;
  - Coordinate Mode: In the corresponding input fields next to **X**, **Y**, **W**, and **H**, enter coordinates;
  - Click Mode: Click the **Click to Select Tablet Area** button. Then, on the drawing display's work area, use your stylus to tap the upper-left and lower-right corner positions to be selected;

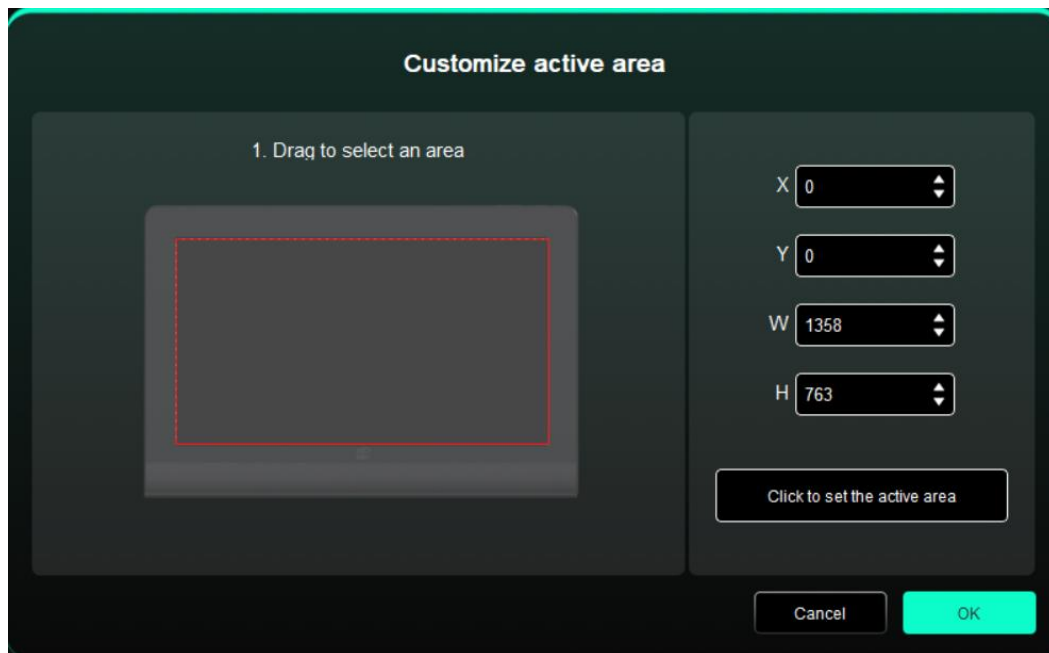


3. Screen Ratio: Match the drawing display's work area proportionally to the entire display area of the selected monitor.

## 1.5. Display Settings

Used to configure color-related parameters for your current drawing display.

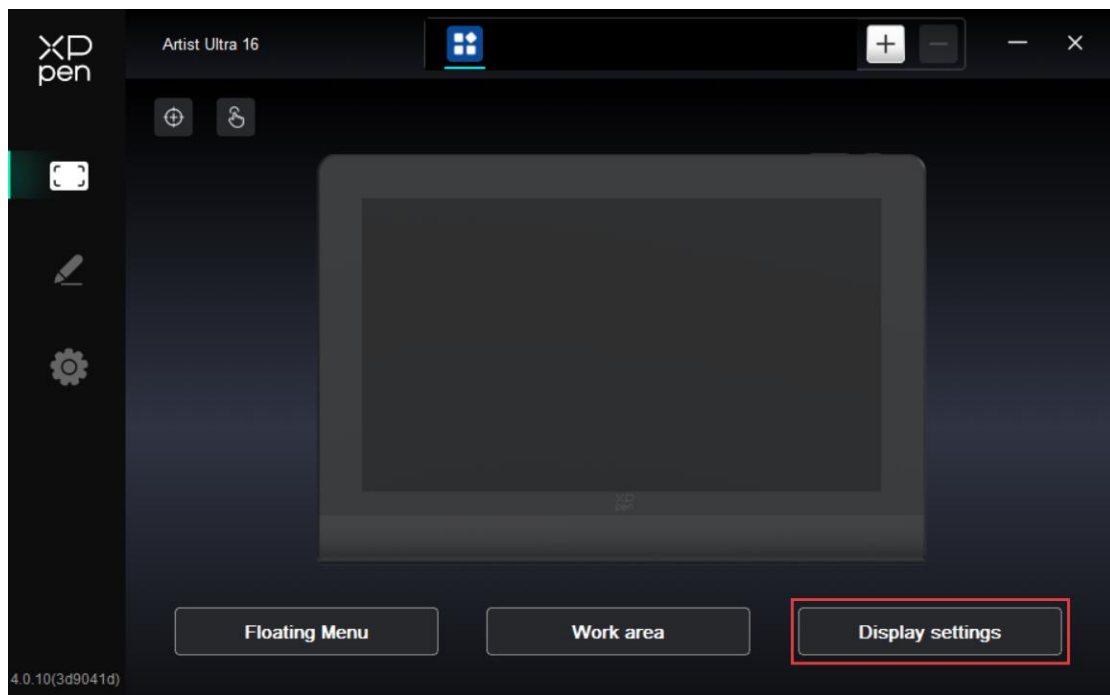


Brightness and Contrast: Drag the corresponding slider to adjust the brightness or contrast of the device.

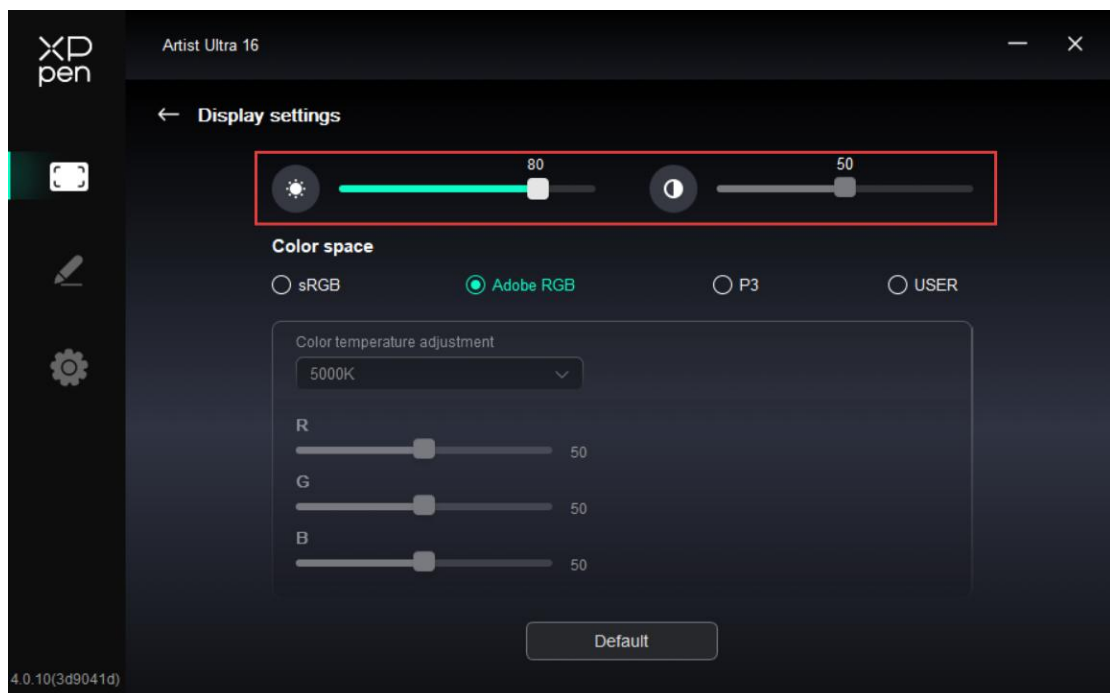

Color Space: This product includes three preset modes: sRGB, Adobe RGB, and P3. These modes have been gamut-limited and pre-calibrated, so no additional ICC clamping is required.

To manually configure ICC, in the **Display Settings** under the driver interface, select **USER** mode. Then configure the parameters in the native color mode.


In USER mode, you can adjust the color temperature (when USER mode is selected for color temperature, R/G/B values become editable) to customize the color space.

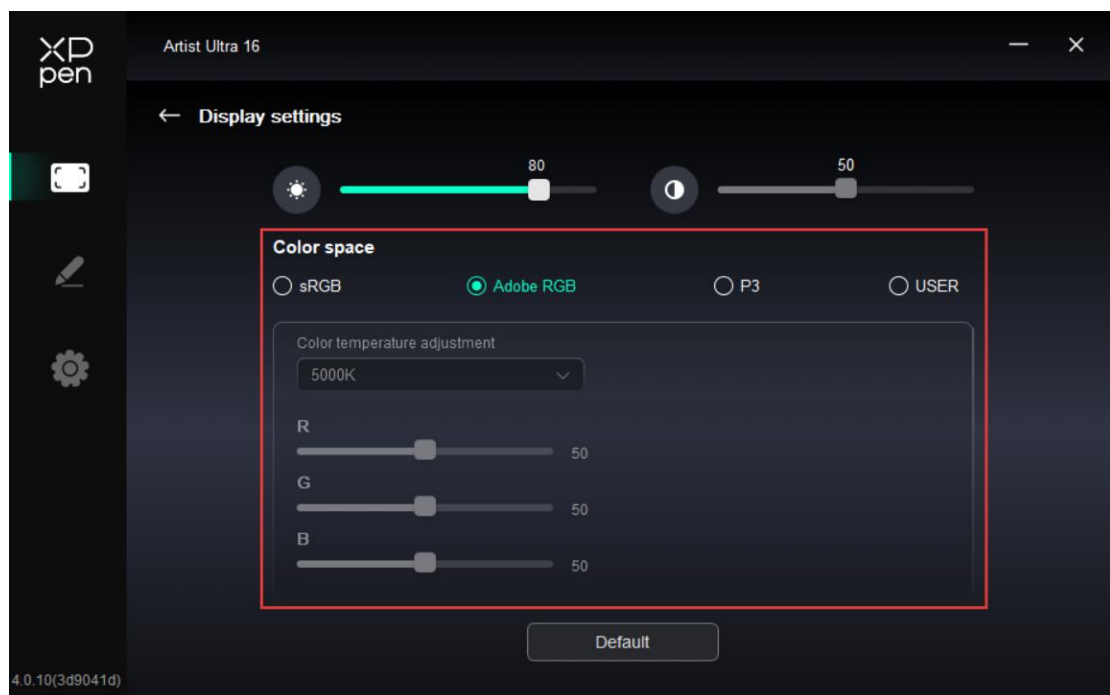

## 2. Stylus Settings


When the stylus is within the work area, the drawing display

automatically identifies different stylus models and adds them to the driver. Please note that only compatible styluses are supported. On the right side, click the stylus name drop-down menu to select and configure the corresponding stylus. When you use the corresponding stylus, the driver automatically switches to the selected stylus's custom settings.

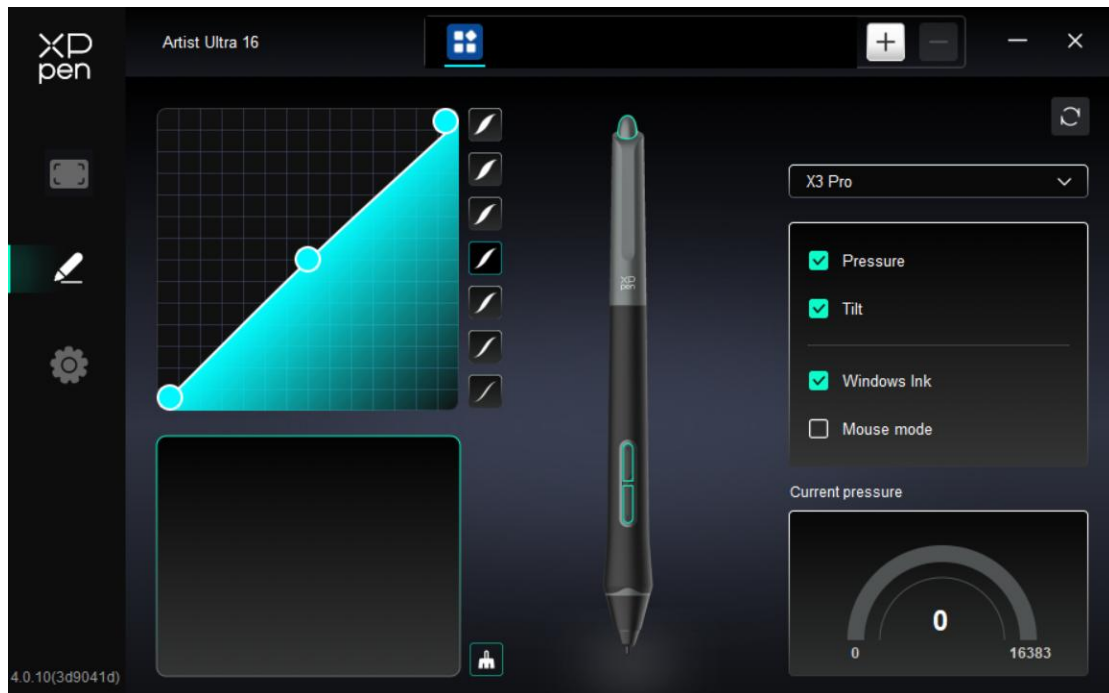

## 2.1. Stylus Keys

On the diagram, click the stylus key to customize its function.

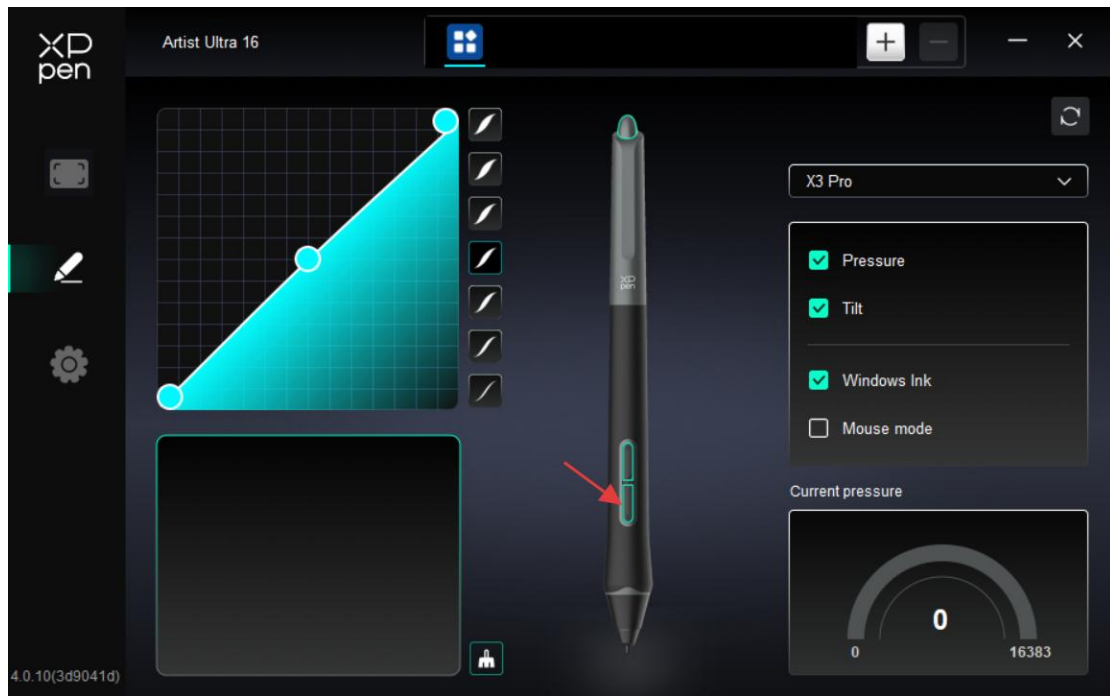


## Shortcut Key:

Configure shortcut keys. For example, in 3D MAX software, set to **Alt + A** to activate the **Align** tool.

Shortcut keys can be configured in multiple groups. For example, type **Ctrl + C** and **Ctrl + V**. When you press the corresponding shortcut keys, all assigned functions within the group execute sequentially.


Windows (Command): Add system key combinations. For example, to type **Win (Cmd) + Shift + 3**, press **Shift + 3**. Then the driver automatically includes the system key.

Custom Name: At the bottom of the driver interface, use the **Custom Name** to assign a display name for your current configuration.

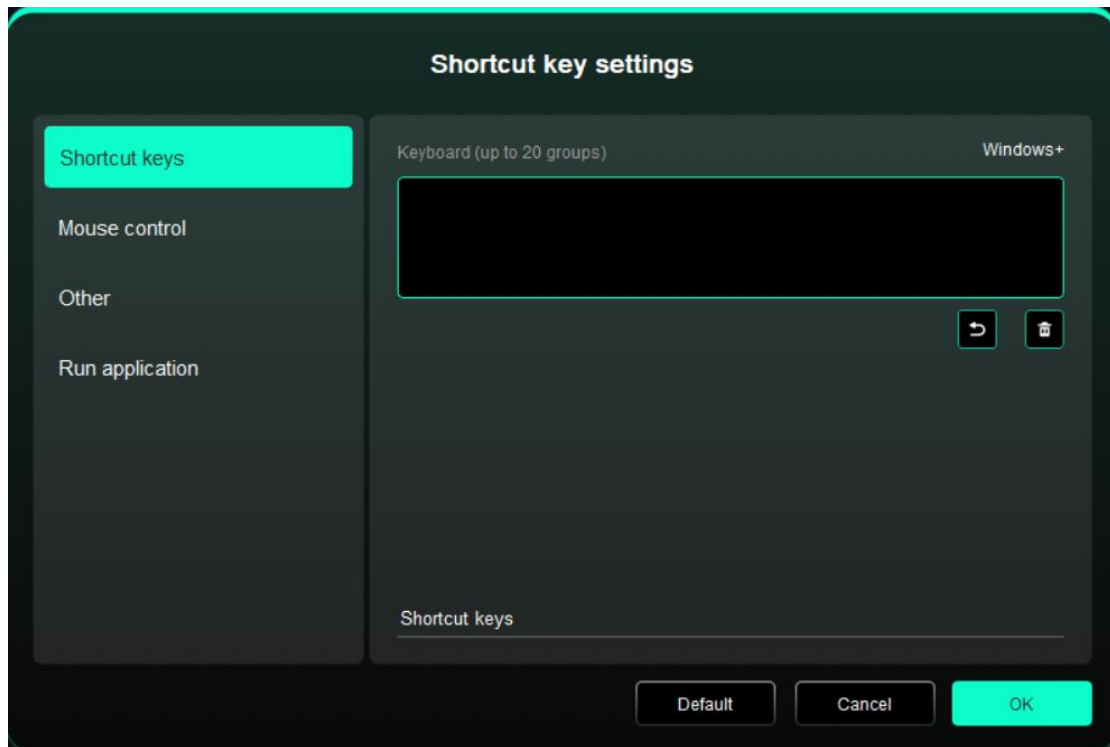

## Mouse Control:

Set mouse and keyboard combinations. For example, selecting **Shift** + **Click** enables this shortcut in supported applications.

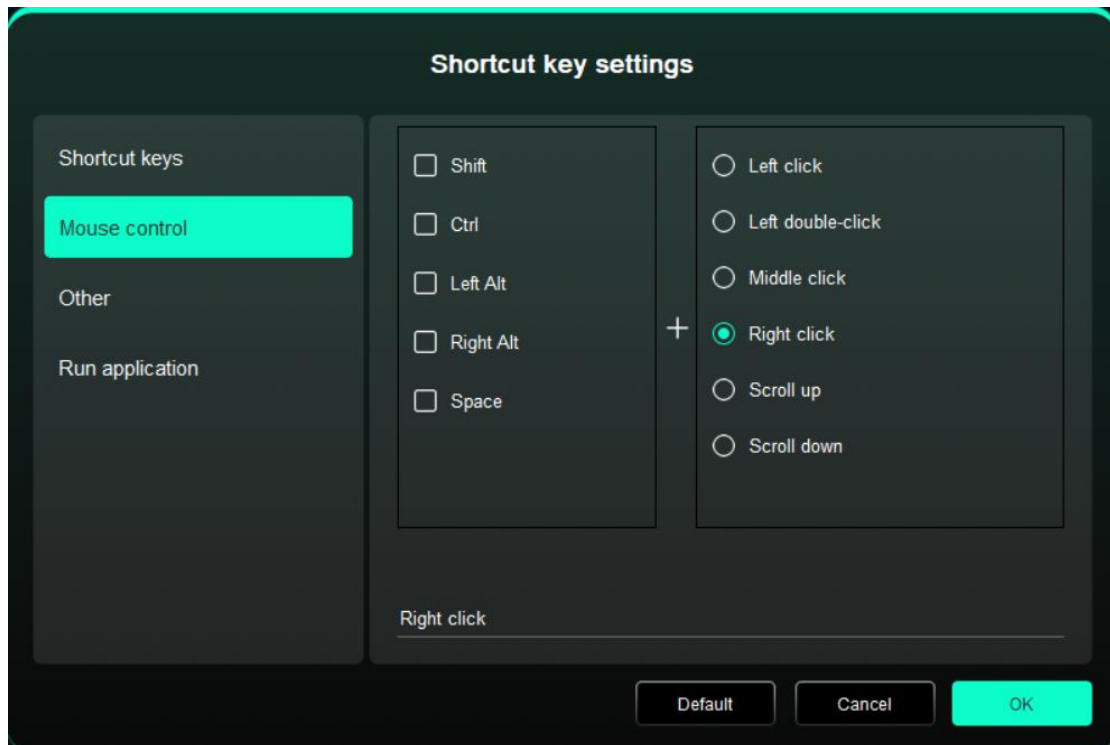

## Others:

Show Driver Panel: Used to quickly access the driver settings panel

Switch Monitors: Used to map the cursor to alternate monitors when multiple monitors are connected

Precision Mode: Used to limit the active display area to a certain range, enabling detailed drawing within the limited area

[B]/[E]: Used to switch repeatedly between **B** and **E** keys

Pen/Eraser: Used to switch repeatedly between Pen and Eraser modes

Scroll: Press and hold the assigned key, and move the stylus to scroll.

Switch to Touch Mode 1: Used to switch repeatedly between Default and Basic touch modes

Switch to Touch Mode 2: Used to switch repeatedly between Default and Custom touch modes


Show Desktop: Used to display the system desktop



On-Display Keyboard: Used to activate the system keyboard


Floating Menu: Used to activate the floating menu

No Action: Performs no function

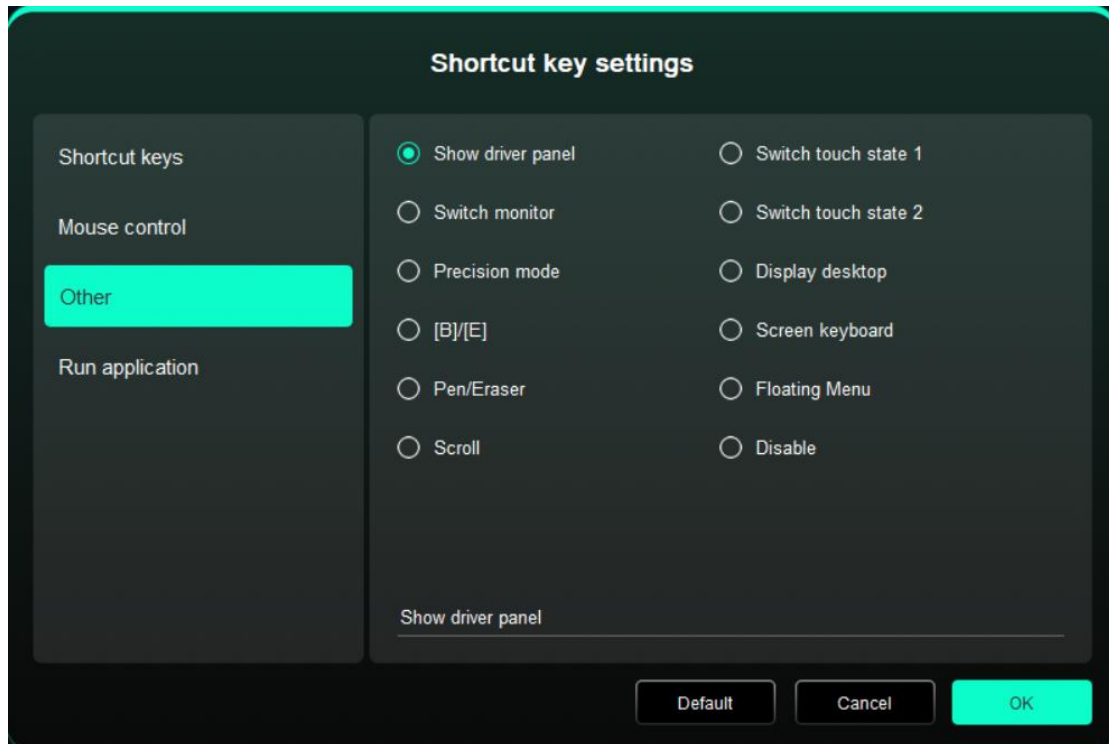


## Execute Application:

Use shortcut keys to quickly launch the corresponding applications

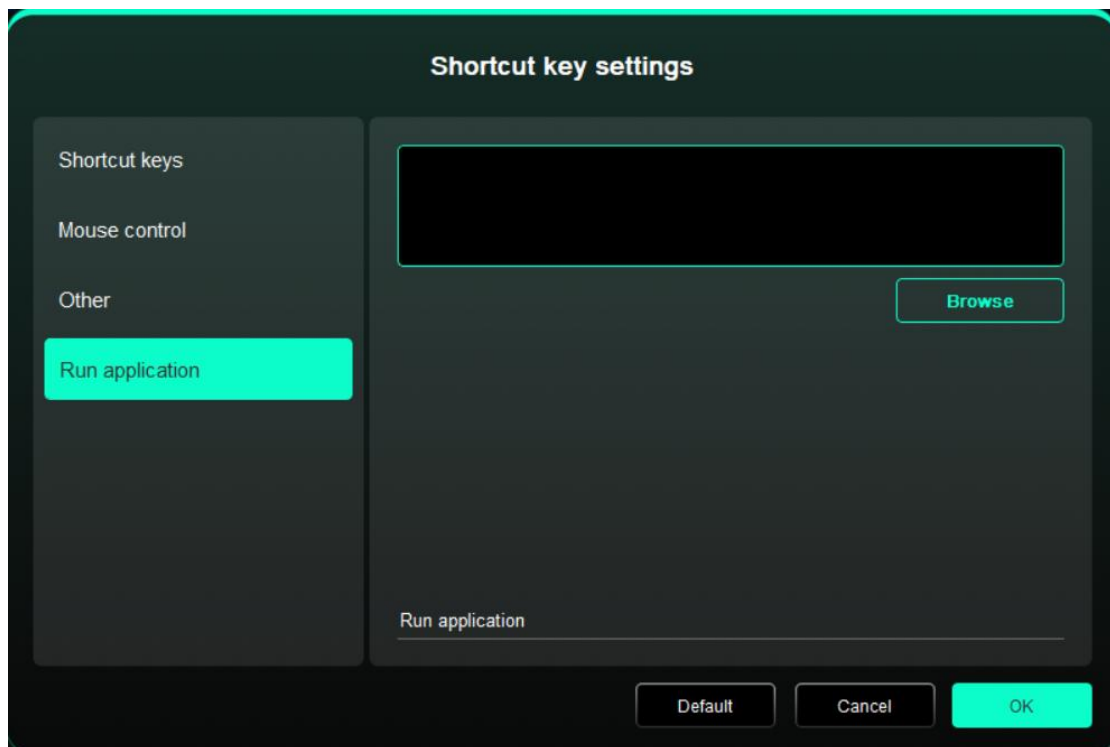

## 2.2. Pressure Sensitivity

Used to adjust the **Pressure Sensitivity** curve or select preset pressure sensitivity options.

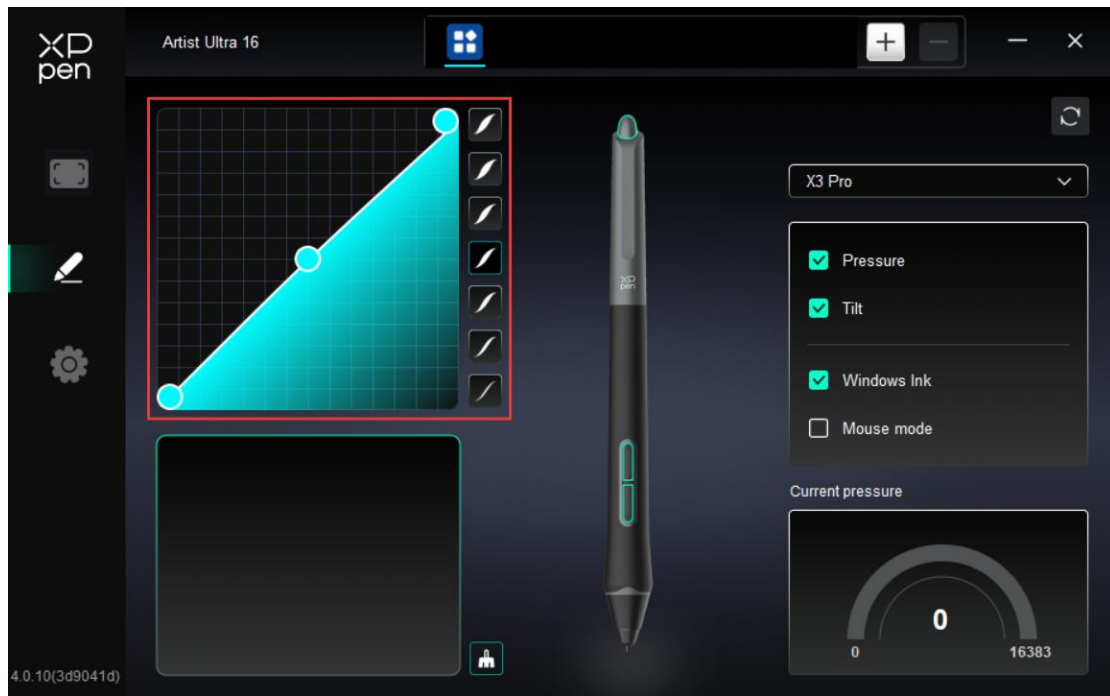

### **Pressure Sensitivity:**

When disabled, the stylus does not respond to pressure sensitivity.

### **Tilt:**

When disabled, the stylus's tilt feature is not activated.

### **Windows Ink (for Windows only):**


Windows supports stylus input. To use handwriting features in Microsoft Office/Whiteboard and other software, do not disable this option.

### **Mouse Mode:**

When you lift the stylus, the cursor remains at its last position, behaving like a mouse. When the mode is enabled, you can adjust the cursor speed as you move on the device; when the mode is disabled, it defaults to stylus mode.

### **Current Pressure Sensitivity:**

Used to test the pressure sensitivity of your current stylus input.

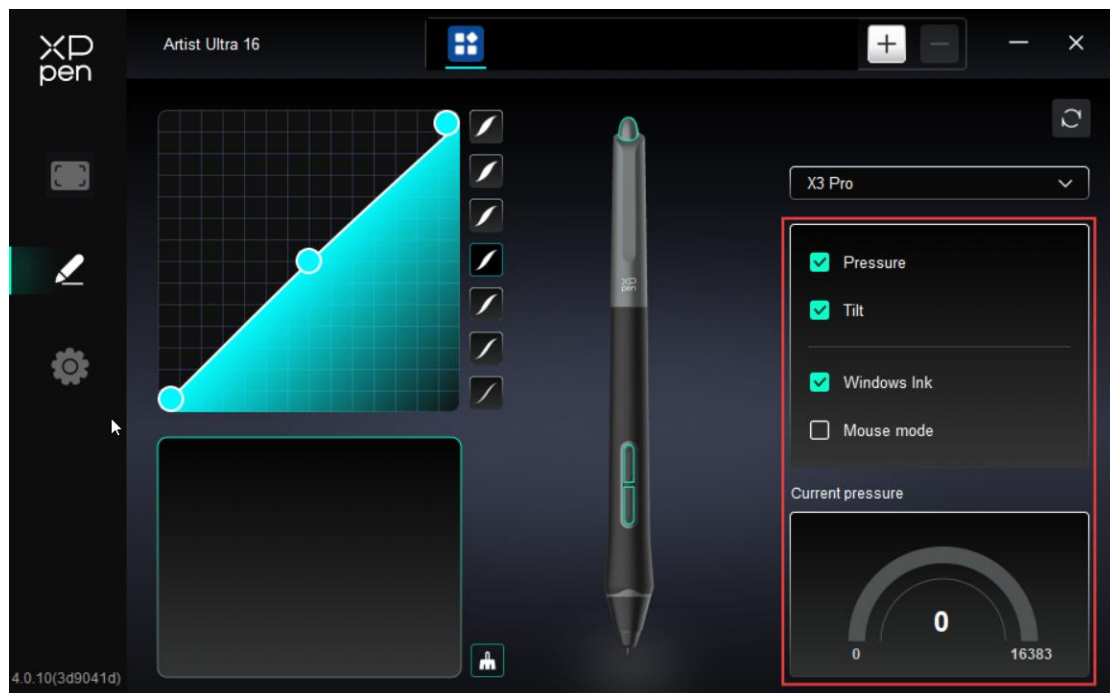

## 2.3. Application


After adding an application to the application list and selecting it, you can customize the key function of your stylus for the selected application.

For example, if you select an application and modify its settings, the modification only applies when you use this application. The driver can automatically detect the switching between different applications. Up to 7 applications can be added.

To add an application, please follow the steps below:

1. In the upper right corner of the application bar, click the + icon to open the **Application Selection** page;
2. Select the application to be added from the open application list. Or click **Browse** to select from the installed applications;

3. Click **OK** to add the selected application to the application bar;
4. To remove an added application, select it and click the - icon behind the application bar;
5. For all other applications, these settings apply to non-customized applications by default.

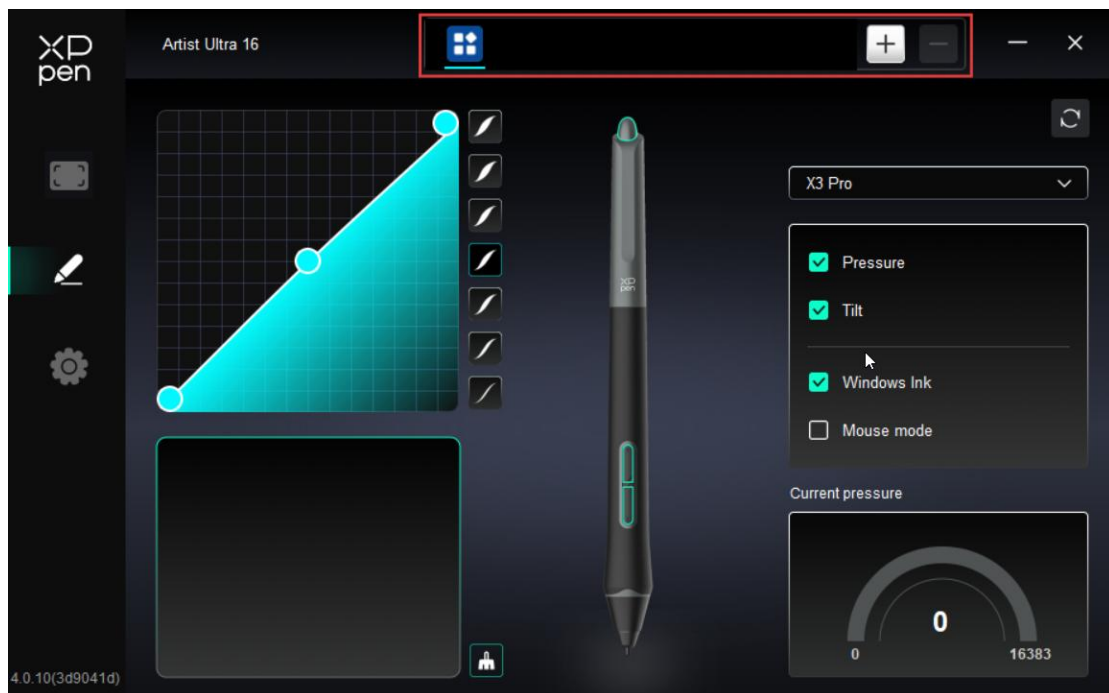

### 3. Driver Settings

#### **Import & Export Profiles:**

Import and export profiles to save or load your customized settings.

This feature is only supported on the same operating system.

#### **Diagnostic Tool:**

It can be used when problems occur during the use of the driver.

## Feedback:

If you encounter any issues or have suggestions while using the driver, please provide feedback through this page.

## Reset:


If you encounter any issues or have suggestions while using the driver, please provide feedback through this page.

## Prompt Information:

When disabled, key press prompts do not appear at the bottom of the display.

## Shortcut Key:

When disabled, all device key functions are not activated.

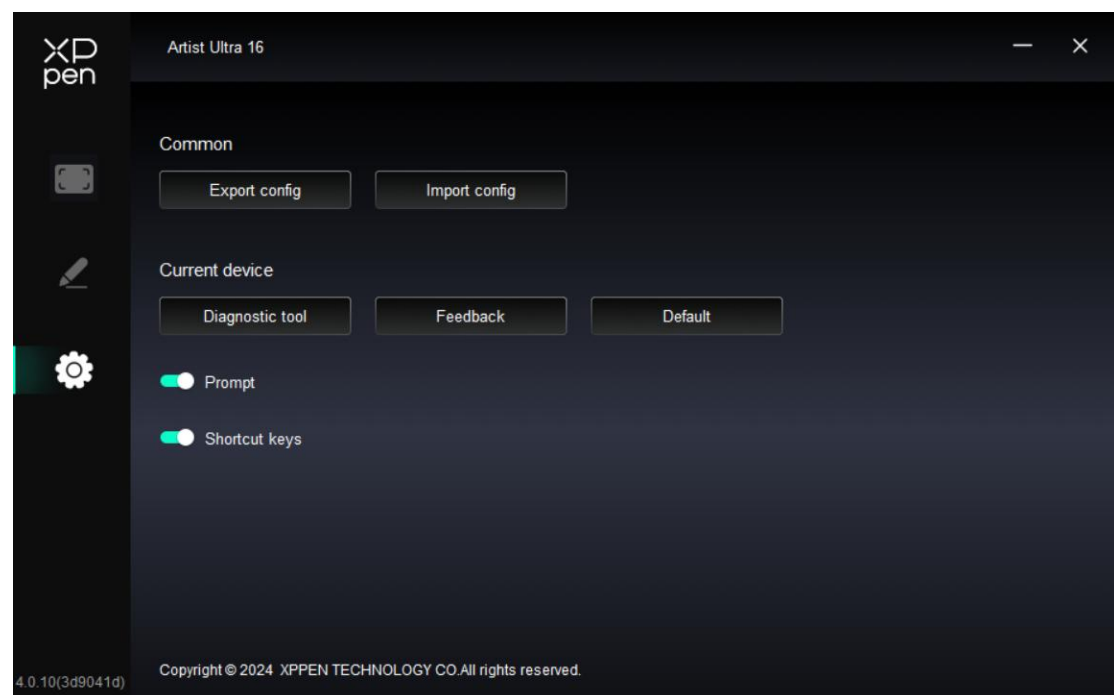

## 4. Wireless Shortcut Remote


### 4.1. Application

After adding an application to the application list and selecting it, you can customize the key function of your stylus for the selected application.

For example, if you select an application and modify its settings, the modification only applies when you use this application. The driver can automatically detect the switching between different applications. Up to 7 applications can be added.

To add an application, please follow the steps below:


1. In the upper right corner of the application bar, click the + icon to open the **Application Selection** page;
2. Select the application to be added from the open application list. Or click **Browse** to select from the installed applications;
3. Click **OK** to add the selected application to the application bar;
4. To remove an added application, select it and click the - icon behind the application bar;
5. For all other applications, these settings apply to non-customized applications by default.

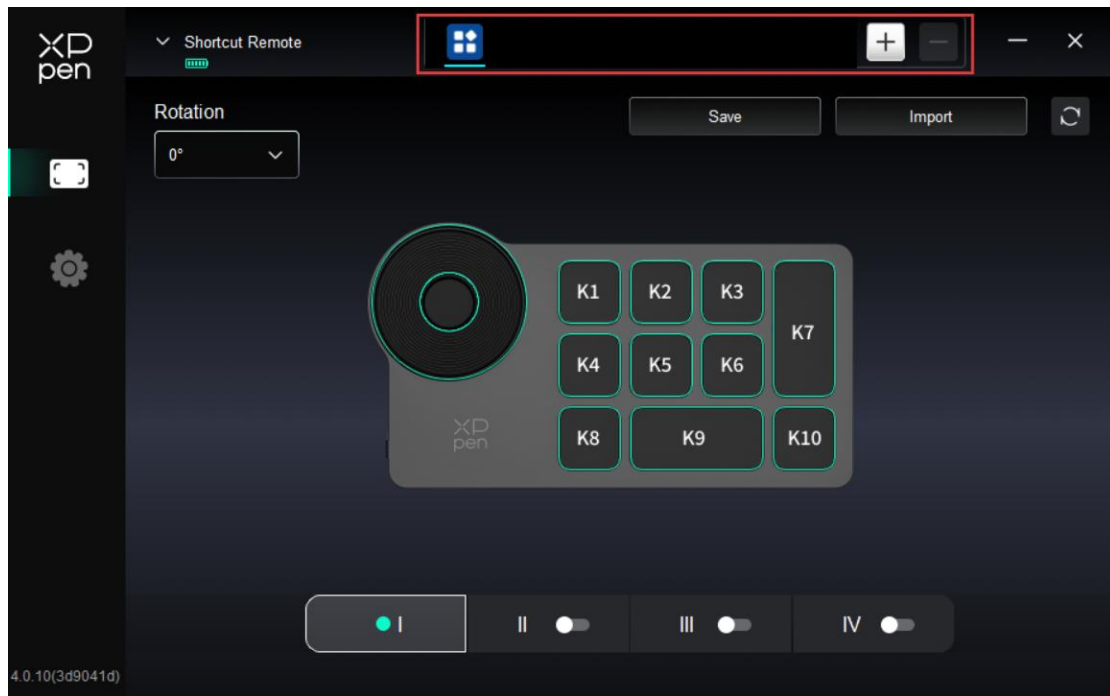

## 4.2. Scroller


Press the middle scroller key to switch between the scroller's functional groups. The driver supports Zoom (default), Scroll, Brush, and Rotate scroller modes.



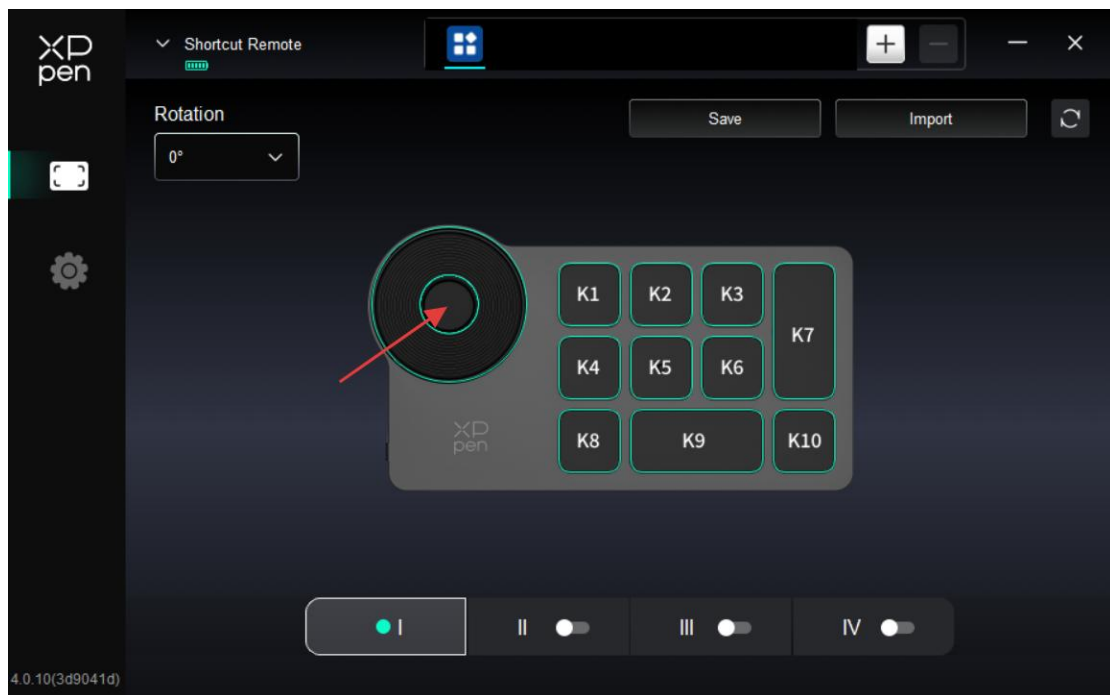

Custom:

On the diagram, click the scroller. Select **Custom** from the preset function drop-down menu. Then enter your desired key/combination to assign clockwise and counterclockwise scroller functions.

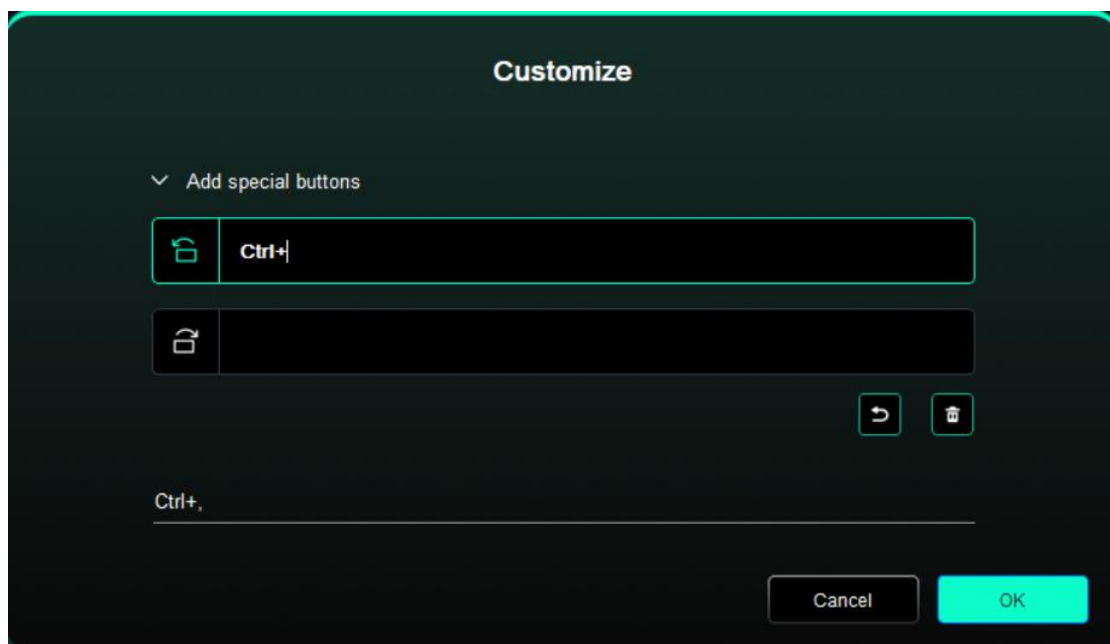

## 4.3. Shortcut Keys


The driver provides four groups of shortcut keys. Group 1 is enabled by default (cannot be disabled). The initial functions of other inactive groups are the same as those of Group 1. Each key group can be customized with unique functions. Once the group is enabled, use **Key Group Toggle** (K1 key by default, customizable) to switch between active groups.



Custom:


On the device diagram, click the corresponding key to customize its function. For the setting method, please refer to the [Stylus Keys](#).

Settings Preview

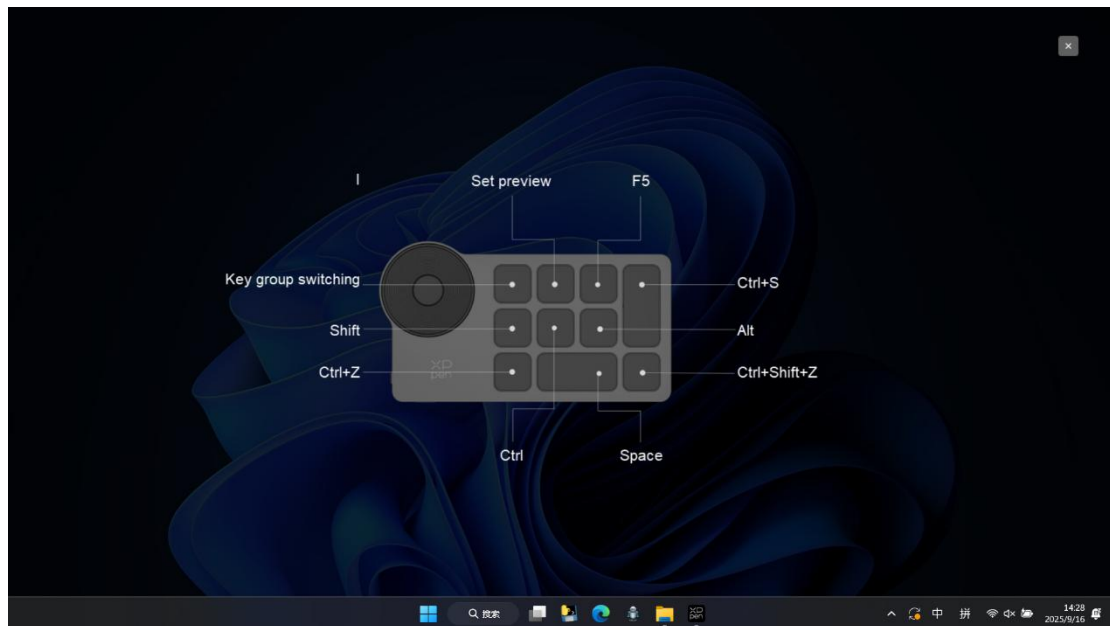

Used to display the functions of the active key group. If you select an inactive group in the driver, it defaults to Group I's key assignments. In the upper right corner, click the close icon to close the preview window.

## 4.4. Import/Save

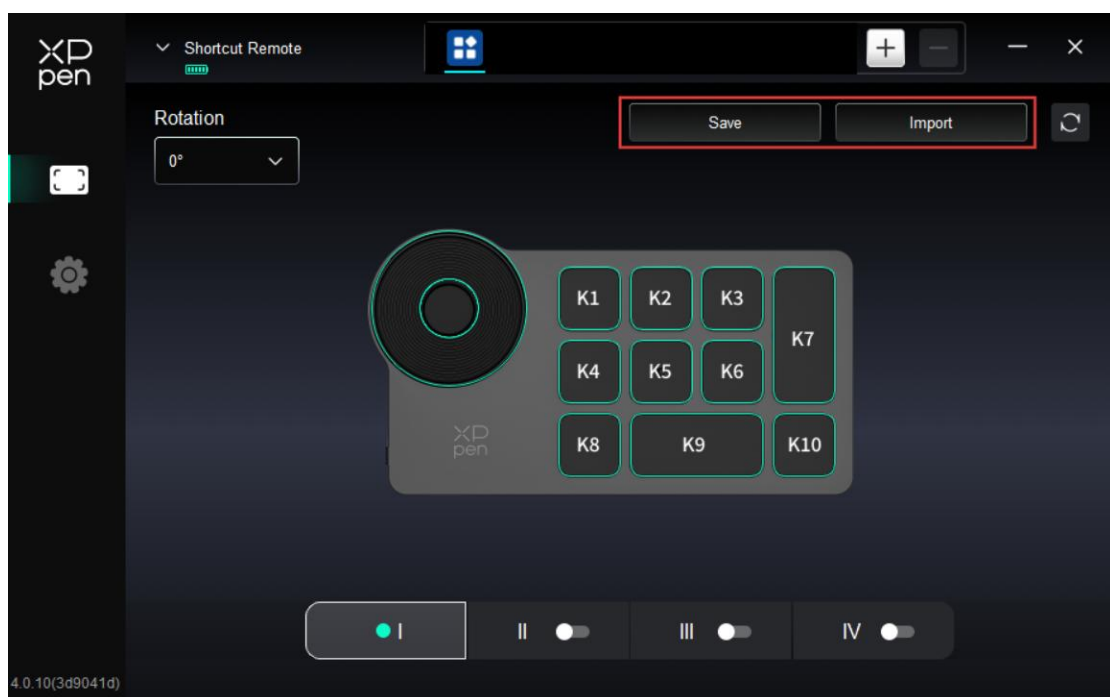

Import:

Used to import the stored configuration in the wireless shortcut remote into the currently selected application in the driver.

Save:

Used to save the configuration of the currently selected application in the driver to the wireless shortcut remote.

Note: Please use the **Import** and **Save** features only with a wired connection. The configurations imported and saved do not include the Rotate function and apply only on the same operating system.

## Driver Uninstallation

### 1. Windows

In the **Start** menu, open **Settings** -> **Applications** -> **Applications and Features**. Locate **Pentablet**. Click **Uninstall**. Then follow the prompts for uninstallation.

### 2. macOS

Navigate to **Go** -> **Applications**. Locate **XPPen**. Click **UninstallPenTablet**. Then follow the prompts for uninstallation.

### 3. Linux

DEB: In the command line, enter **sudo dpkg -r XPPenLinux**. Then execute the command;

RPM: In the command line, enter **sudo rpm -e XPPenLinux**. Then execute the command;

Tar.gz: Unzip the file first. In the command line, enter **sudo**. Drag **uninstall.sh** into it. Then execute the command.

## FAQ

### **1. How to fix a drawing display that is blank or flickering?**

- 1) Please verify the power cable is securely connected. Due to computer power output limitations, when connected via a single USB-C to USB-C cable, the product may experience display flickering or blackouts. At this time, please use a second USB-C cable to connect the drawing display to the power adapter for power supply;
- 2) Please check whether the video signal outputs normally. If it is connected to your computer's USB-C port, ensure the port supports DisplayPort signal output;
- 3) Please refer to the *Product Connection* section to verify the correct connection method and cable;
- 4) Please check whether the power indicator light is blue. If not, check the cables and restart the device;
- 5) If the signal is unstable, check whether the cable connections are secure.

### **2. How to fix a device that cannot be recognized by my computer?**

- 1) Check whether the USB port you are using is functioning properly. If not, try another USB port.

### **3. How to fix a drawing display not displaying 3840 × 2160 at 60 Hz?**

- 1) Verify whether your computer's graphics card and video interface support 3840 × 2160 at 60 Hz;
- 2) Is another external monitor connected to the same graphics port? If yes, disconnect all other monitors first, then verify whether the drawing display's resolution can be increased.

### **4. How to prevent my OLED drawing display from burning in?**

- 1) If the same image is displayed continuously or repeatedly on any OLED drawing display, it may result in afterimage retention. Normally, the afterimage will disappear within a few minutes. This is a property of the OLED material, not a product failure;
- 2) If you are not going to use the Artist Ultra 16 for a long time, it is recommended to use a screen saver or turn off the drawing display. You may also consider using the Dark Mode to change the menu bar in your operating system to a black background.

### **5. Will the OLED drawing display exhibit flickering?**

- 1) The Artist Ultra 16's OLED display utilizes DC-like dimming. At higher brightness levels, the drawing display employs DC dimming to avoid flickering; at lower brightness levels, the drawing display employs high-frequency PWM dimming at 1,920 Hz.

## 6. How to use the touch feature in Photoshop?

- 1) In the **Preferences > Performance** settings, please make sure that the **Use Graphics Processor** checkbox is checked.

## 7. How to prevent accidental touches in drawing software?

- 1) The product now supports Stylus Priority Mode, which automatically disables the touch feature when the stylus enters the work area to prevent accidental touches;
- 2) You can customize the Touch Area via the product driver to limit the active touch area and prevent accidental touches;
- 3) You can also wear the included anti-touch gloves to prevent accidental touches during drawing;
- 4) Or simply press the touch switch on the top of the product to globally disable the touch feature during drawing.

## 8. How to prevent accidental touches in Krita?

- 1) Krita supports drawing with fingers on the touch screen. When using a touch screen-enabled drawing display, this feature may interfere with the stylus pressure input. Please disable it at this time.
- 2) To disable this feature, navigate to **Settings -> Configure Krita -> General -> Tools** to uncheck **Finger Painting: Enable drawing input on touch screen**.
- 3) In addition, when this option is unchecked, canvas panning remains available via single-finger gestures. To prevent drawing interference, it is recommended to switch to 3-finger gestures for canvas panning.
- 4) Navigate to **Settings -> Configure Krita -> Canvas Shortcut Keys ->**

**Pan Canvas View -> Gestures** to switch to **3-Finger Panning**.

## **9. How to fix a non-responsive stylus?**

- 1) Make sure you are using the original stylus of the device;
- 2) Make sure the driver is installed properly and check whether the driver's stylus settings are configured properly.

## **10. How to fix pressure sensitivity issues in drawing software (cursor moves but no pressure response)?**

- 1) Check whether the drawing software supports pressure sensitivity;
- 2) Download the latest driver installation file from the XPPen website.  
Then check whether the pressure sensitivity is configured properly in the driver settings;
- 3) Before installing the driver, please close all anti-virus software and graphics software;
- 4) Before installation, please uninstall the drivers for other drawing displays;
- 5) After installation, restart your computer;
- 6) If the pressure sensitivity functions properly in the driver settings (for Windows: make sure **Windows Ink** is enabled in the driver's **Stylus Settings**), launch the drawing software and test again.

## **11. How to calibrate my stylus to align the cursor?**

- 1) Make sure the stylus is properly mapped to your Artist Ultra 16;
- 2) On the device settings page of the driver, locate the **Calibrate** icon.



Click it and follow the steps to calibrate the display.

- 3) Please hold the stylus in the standard grip position. To optimize the product for your usage habits, please use your stylus to tap the red cross center on the device display to calibrate the offset between the stylus and cursor.

## **12. How to fix drawing lag in drawing software?**

- 1) Check whether the display output refresh rate of your computer is set to 60 Hz;
- 2) Check whether your computer's hardware configuration (CPU & GPU) meets the recommended configuration requirements of the installed drawing software. If yes, adjust settings as per the official software FAQ guidelines to optimize related performance.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

### **Low Blue Light Ratio:**

A lower blue light ratio prevents eye fatigue and ensures greater visual comfort.

By default, the product supports hardware-level low blue light, delivering low blue light effects immediately upon startup.

